



3312081.000 FOAM KIT REPLACEMENT INSTRUCTIONS FOR LOW PROFILE AIR CONDITIONERS AND HEAT PUMP

FOAM KIT CONTAINS:

- (1) 55" Foam Tape
- (1) 17-1/2" Foam Tape
- (1) 35-1/2" Foam Tape
- (1) Installation Instructions

INSTRUCTIONS:

1. Remove shroud from air conditioner/heat pump. (Unit does not require removal.)
2. Determine if the 1-1/4" foam tape was originally installed in the shroud or directly on the air conditioner/heat pump, and remove foam tape accordingly. Do not remove foam barrier from air conditioner/heat pump. (Save shroud for replacement.)

Note: It will not be possible to remove all traces of the original foam tape and/or adhesive residue.

3. Remove paper backing from foam tape and install as shown in FIG. 1. If excess foam length exists after installation, cut off extra length and discard.
4. Re-assemble shroud on air conditioner/heat pump.

FIG. 1

Step 1:

Remove shroud.

Step 2:


Remove foam tape.

Step 3:

Install new foam tape (supplied) exactly as shown.

Step 4:

Re-assemble shroud to unit.

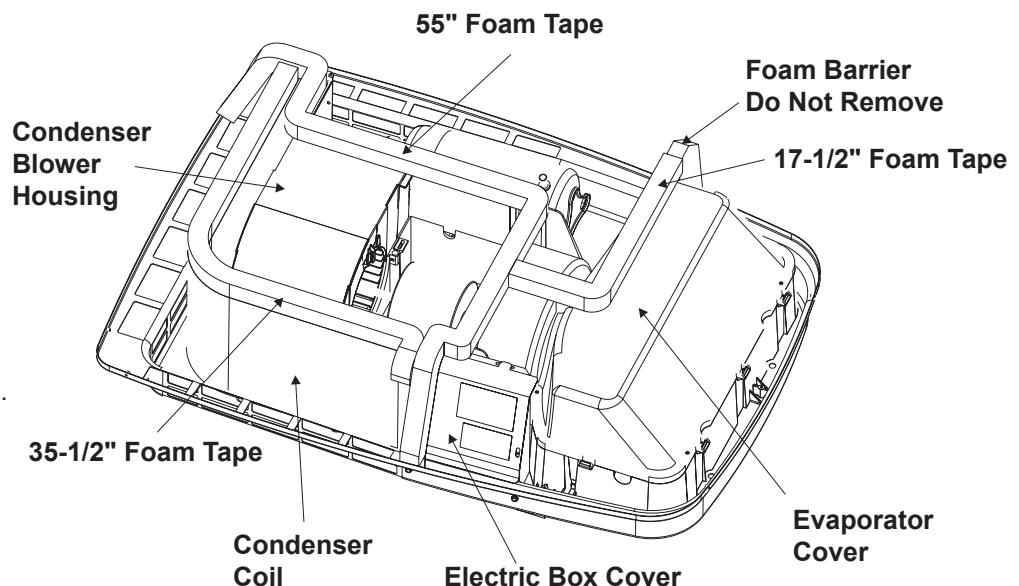

REVISION A

Form No. 3312086.014 7/17
©2017 Dometic Corporation
Lagrange, IN 46761