



Go Power! Manual

GP-1000 Inverter



Go Power! Electric Inc.
PO Box 6033
Victoria, BC V8P 5L4
Tel: 866-247-6527
Fax: 866-607-6527
Email: info@gpelectric.com



Table of Contents

1. INTRODUCTION	3
2. SPECIFICATIONS	3
3. FEATURES	4
4. INSTALLATION	5
5. OPERATION	8
6. OPERATING LIMITS	8
7. TROUBLESHOOTING	9
8. MAINTENANCE	11
9. WARRANTY	11

Go Power! Electric Inc.
PO Box 6033
Victoria, BC V8P 5L4
Toll Free Tel: 866-247-6527
Toll Free Fax: 866-607-6527
Email: info@gpelectric.com



8. Maintenance

Very little maintenance is required to keep your inverter operating properly. You should clean the exterior of the unit periodically with a dry cloth to prevent accumulation of dust and dirt. At the same time, tighten the screws on the DC input terminals.

9. Warranty

We warrant this product against defects in materials and workmanship for a period of 12 months from the date of purchase and will repair or replace any defective Go Power! Inverter when directly returned, postage prepaid, to the manufacturer. This warranty will be considered void if the unit has suffered any obvious physical damage or iteration either internally or externally, and does not cover damage arising from improper use such as plugging the unit into an unsuitable power sources, attempting to operate products with excessive power consumption requirements, reverse polarity, or use in unsuitable climates.

This is the only warranty and the company makes no other warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. Repair or replacement are your sole remedies and shall not be liable for damages, whether direct, incidental, special or consequential, even though caused by negligence or other fault.



- Move the television as far away from the power inverter as possible.
- Keep the cables between the battery and the power inverter as short as possible and twist them together with about 2 to 3 twists per foot. This minimizes radiated interference from the cables.

7.2 Troubleshooting guide

Possible Cause	Problem and Symptoms	Solution
Using standard voltmeter	Low AC output voltage 95-105 VAC.	Use true RMS averaging meter.
Overload	Low output voltage and LED indicator is orange.	Turn off. Reduce load, turn on.
Low DC input voltage Inverter switched off. No power to inverter.	No output voltage, LED indicator is orange.	Recharge battery, check connections and cable.
High input voltage		Check for 12 V nominal voltage.
Internal operating temperature too high.		Allow inverter to cool off. Reduce load if continuous operation required.
Internal fuse open	No output voltage, no lights.	Have qualified service technician check and replace.
Reverse DC polarity		Have qualified service technician check and replace fuse, OBSERVE CORRECT POLARITY.
High input voltage	No output voltage, voltage indication.	Make sure that inverter is connected to 12 V battery. Check regulation of charging system.
Poor DC wiring, poor battery condition.	Low battery alarm on all the time, LED indicator is orange.	Use proper cable and make solid connections. Use new battery if batteries are poor.



1. Introduction

The Go Power! Inverter series provides mobile power for people on the go. Run standard AC appliances wherever you travel. Silent, lightweight and simple to use, Go Power! Inverters can be used in a wide range of applications including remote homes, RVs, boats and long haul trucks. It will operate most televisions and VCR's, personal computers and small appliances including drills, sanders, grinders, mixers, blenders and microwaves.


To get the most out of your power inverter, it must be installed and used properly. **Please read the instructions in this manual before installing and using your inverter.**

2. Specifications

Model No.	GP-1000-12 V
Continuous Output Power	1000 W
Surge Rating	1300 W
Output Waveform	Modified Sine Wave
Output Voltage	115 VAC RMS +5%/-10%
Output Frequency $\pm 1\%$	60 Hz
Input Voltage	10-15 VDC
Efficiency	80 - 90%
No Load Current Draw	0.2 A
Protection	Overload, overtemperature, overvoltage, and low voltage
Low Battery Alarm $\pm 2\%$	10.5 V
Low Battery Shut-Down $\pm 2\%$	10.0 V
Operating Temperature Range	0 - 40°C / 32°F - 104°F
Storage Temperature Range	-30°C - 70°C / -22°F - 158°F
Cooling	Continuous fan
AC Receptacle	2
Dimensions (LxWxH) mm	284 x 147 x 71
inches	11.2 x 5.8 x 2.8
Weight kg / lbs	2.0 / 4.2
Warranty	1 year
Inverter Install Kit	GP-DC-Kit 2

3. Features

3.1 Front view – GP-1000

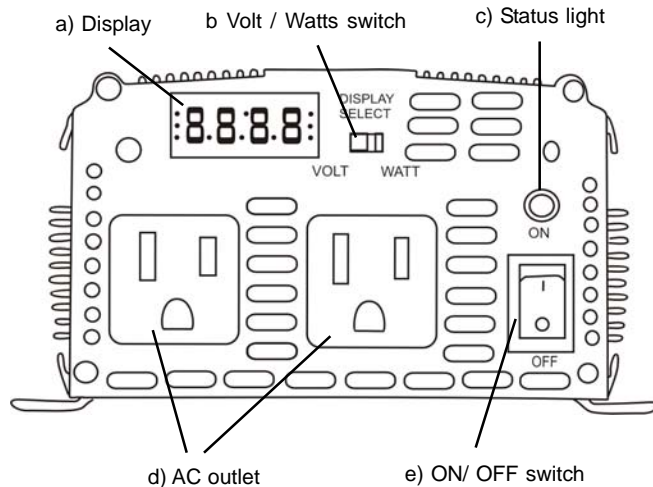

- a) Display:
Volts / Watts display.
- b) Volt / Watt Switch:
- c) Status light:
- d) AC outlet:
Outlet sockets available: North America
- e) ON/ OFF switch:
Leave in the OFF position during installation.

6.2 Overload

The status LED will be orange and will come on when the power inverter has shut itself down because its output circuit has been short circuited or drastically overloaded. Switch the ON/OFF switch to OFF, correct the fault condition, and then switch the ON/OFF switch back to ON.

Some induction motors used in refrigerators, freezers, pumps and other motor operated equipment require very high surge currents to start. The power inverter may not be able to start some of these motors, even though their rated current draw is within the power inverter.

If the motor refuses to start, observe the battery voltage indicator while trying to start the motor. If the battery voltage indicator drops below 11 volts while the inverter is attempting to start the motor, this may be why the motor will not start. Make sure that the battery connections are good and that the battery is fully charged. If the connections are good and the battery is charged, but the voltage still drops below 11 volts, you may need to use a larger battery.

6.3 Input voltage

The power inverter will operate from input voltage ranging 10 V – 15 V. If the voltage drops below 10.7 V, an audible low battery warning will sound and the status LED will be orange. The power inverter will shut down if the input voltage drops below 10 V. This protects your battery from being over discharged.

The power inverter will also shut down if the input voltage exceeds 15 V. This protects the inverter against excessive input voltage. Although the power inverter incorporates protection against overvoltage, it may still be damaged if the input voltage is allowed to exceed 20 V.

7. Troubleshooting

7.1 Common problems

- a) Buzz in audio systems
Some inexpensive stereo systems will emit a buzzing noise from their loud speakers when operated from the power inverter. This is because the power supply in the device does not adequately filter the modified sine wave produced by the power inverter. The only solution is to use a sound system that incorporates a higher quality power supply.
- b) Television interference
Operation of the power inverter can interfere with television reception on some channels. If this situation occurs, the following steps may help to alleviate the problem.
 - Make sure that the chassis ground lug on the back of the power inverter is solidly connected to the ground system of your vehicle, boat or home.
 - Do not operate high power loads with the power inverter while watching television.
 - Make sure that the antenna feeding your television provides an adequate ("snow free") signal and that you are using good quality cable between the antenna and the television.

4.4 Grounding

The power inverter has a lug on the rear panel: "Chassis Ground." This is to connect the chassis of the power inverter to the ground. The ground terminals in the AC outlets on the front of the inverter are also connected to the ground lug.

If available, the chassis ground lug should be connected to a ground point, which will vary depending on where the power inverter is installed. In a vehicle, connect the chassis ground to the chassis of the vehicle. In a boat, connect to the boat's grounding systems. In a fixed location, connect the chassis ground lug to earth.

The neutral (common) conductor of the power inverter AC output circuit is not bonded to the chassis ground. Therefore, when the chassis is connected to ground, the neutral conductor will not be grounded.

At no point should the chassis ground and the neutral conductor of the inverter be bonded. Bonding the chassis ground and the neutral conductor of the inverter or connecting the inverter to household or recreational AC distribution wiring will damage the unit and void the warranty.

Caution! The negative DC input of the power inverter is connected to the chassis. Do not install the power inverter in a positive ground DC system. A positive ground DC system has the positive terminal of the battery connected to the chassis of the vehicle or to the grounding point.

5. Operation

To operate the power inverter, turn it on using the ON/OFF switch on the front panel. The power inverter is now ready to deliver AC power to your loads. If you are operating several loads from the power inverter, turn them on separately after the inverter has been turned ON. This will ensure that the power inverter does not have to deliver the starting currents for all the loads at once.

5.1 Controls and indicators

The ON/OFF switch turns the control circuit in the power inverter ON and OFF. It does not disconnect power from the power inverter.


When the switch is in the OFF position, the power inverter draws no current from the battery. When the switch is in the ON position but with no load, the power idle current is approximately 1 A (see product specifications for exact current draw).

6. Operating limits

6.1 Overtemp

The status LED will be orange and will come on when the inverter has shut itself down because the inverter has become overheated. The power inverter may overheat because it has been operated at power levels above its rating, or because it has been installed in a location which does not allow it to dissipate heat properly. The power inverter will restart automatically once it has cooled off.

3.1 Rear view – GP-1000

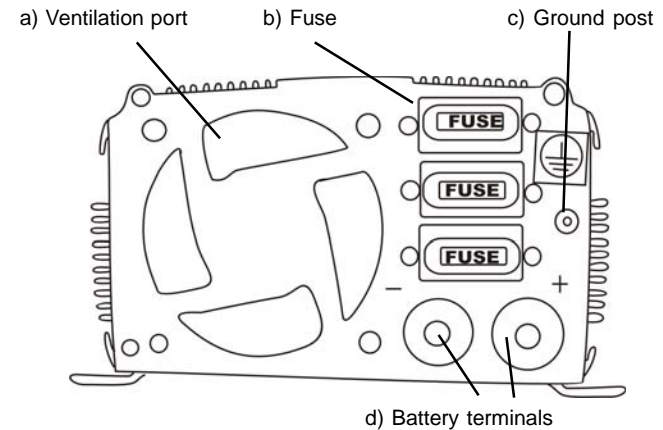

- a) Ventilation port:
Do not obstruct, allow at least 1 inch for air flow.
- b) Fuse:
- c) Ground post:
- d) Battery terminals: Connect to 12 V battery or other 12 V power source. Note that "+" is positive, "-" is negative. Reverse polarity connection will blow external fuses and may damage inverter permanently.

Note: Minimum inverter DC cable & DC inverter fuse sizes, see section 4.3 and 4.4.

4. Installation

4.1 Where to install

The power inverter should be installed in a location that meets the following requirements:

- a) Dry - Do not allow water to drip or splash on the inverter.
- b) Cool - Ambient air temperature should be between 0°C and 40°C (the cooler the better).
- c) Ventilated - Allow at least two inches of clearance around the inverter for air flow. Ensure the ventilation openings on the rear and bottom of the unit are not obstructed.
- d) Safe - Do not install the inverter in the same compartment as batteries or in any compartment capable of igniting flammable liquids such as gasoline.
- e) Inverter should be located within 10 feet of the batteries.

4.1 Hook-up and testing

To hook-up the inverter please follow these guidelines:

Caution! Do not connect this inverter and another AC source (generator or utility power) to the AC wiring or AC loads at the same time. Doing so will destroy the inverter and void the warranty, regardless whether the inverter is switched on or off. If you are using more than one AC source for the AC wiring or AC loads, it is highly recommended that you install an automatic transfer switch (GP-TS), available from Go-Power Electric Inc.

1. Unpack and inspect your Go Power! Inverter, check to see that the power switch is in the OFF position. We recommend using DC Install Kits whenever installing a GP Inverter.
2. When attaching the DC inverter cables to the power input terminals on the rear panel of the power inverter. The (+) terminal is positive and (-) terminal is negative. Connect the cables into the terminals by placing the lug connector between the washers and tighten the terminal screw or nut to clamp the wires securely. Ensure connections are tight.

Caution! A reverse polarity connection will blow a fuse in the inverter and may permanently damage the inverter. Damage caused by reverse polarity connection is not covered by our warranty.

3. First connect the cable from the negative terminal of the inverter to the negative terminal of the battery. Make a secure connection.

Caution! Loose connections result in excessive voltage drop and may cause overheated wires and melted insulation. Ensure connections are tight.

4. Before proceeding further, carefully check that the cable you have just connected is going from the negative terminal of inverter to the negative output terminal of the power source (battery).
5. Install the inverter fuse into the positive lead. Fuse should be located within 12" of battery. Ensure all connections are tight and secure.
6. Connect the cable from the positive terminal of inverter to the positive terminal of the battery. Make a secure connection. Check your polarity.

Caution! This inverter cannot supply power to any AC distribution wiring or AC loads in which the neutral and ground are connected (bonded). Doing so will destroy the unit and void the warranty. If you do not understand neutral to ground bonding then please have a professional install your system for you. See "Grounding" for more information.

7. Set the power switch to the ON position. Check that the power LED is ON, and if not, check your battery bank and the connections to the inverter.

Warning! You may observe a spark when you make this connection since current may flow to charge capacitors in the power inverter. Do not make this connection in the presence of flammable fumes, as explosion or fire may result.

Caution! Connecting this inverter to AC distribution wiring or AC loads in which the neutral and ground are connected (bonded) will damage the unit and void the warranty.


8. Set the power inverter switch to the OFF position. The power LED light may blink and go dim. The internal alarm may sound momentarily. This is normal. Plug the test load into the AC receptacle on the front panel of the inverter.
9. Set the power inverter switch to the ON position and turn the test load on; the inverter should supply power to the load. If you plan to measure the output voltage of the inverter, a true r.m.s. meter must be used for accurate readings.
10. Ensure battery interconnect cables are a minimum of #4 gauge wire and a maximum of 10" in length.

4.2 Cables


Cables are not included with the unit.

4.3 Inverter fuse

A class "T" inverter fuse should be included in all installations.

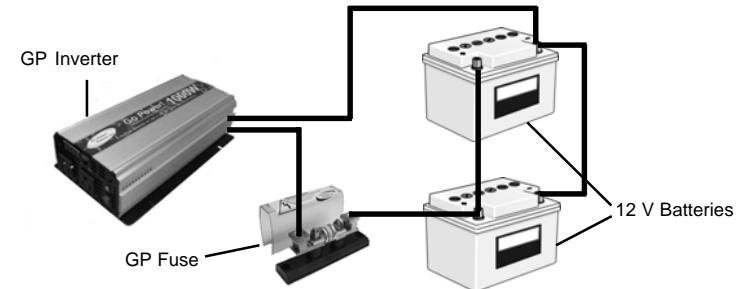

*Installation using two 12 volt batteries.

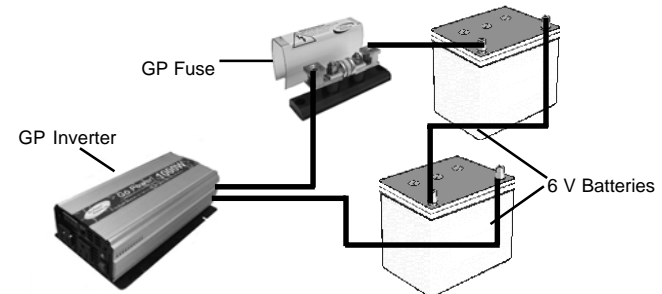

*Installation using two 6 volt batteries.