

• Park your trailer on your camp site – traveling position.



• Install ReVo Leveler on to the nest.



side.

- Press the power button to turn ReVo Leveler on. Percent of battery charge will be displayed.
- Press to once E ?????".
- Press the L/R button once – Display shows "????".

• Press the L/R button

Display shows board

thickness and which

a second time -

side of the trailer

level left to right. Up arrow means

boards under the same side as ReVo

Leveler. Down arrow means opposite

needs raised to be



• Place boards of the displayed thickness in front of low side wheels and pull the trailer up on them. No more guessing what

boards to use. No in and out of the tow vehicle. No, "that's good enough".



• Your trailer is level left to right when both arrows are solid green.



• Arrows are visible from the driver's mirror.



• Prepare the trailer for disconnecting from the tow vehicle.



Press the DIS button

 Display shows jack
 extension needed to
 reach level front to
 back and direction to
 move your trailer to

reach the disconnect position.



• Use the tongue jack or landing jacks to raise or lower your trailer. Your trailer is at the correct

disconnect position when both arrows are solid green.

Disconnect the tow vehicle from the trailer and drive clear of the trailer.



• Press the F/B button – Arrow will show you to raise or lower the trailer to reach level front to back.



• Using the tongue jack or landing jacks, your trailer is level front to back when both arrows are solid

green.



• Press the power button to turn off ReVo Leveler.



• Remove ReVo Leveler from the nest and place it into storage until you are ready to connect the

tow vehicle again.