WINEGARD® Wingman™

RV-WING (white) GS-WING (gray) Digital Booster No tools required for installation.

No wires to connect.

NOT ALL PUSH RIVETS
WILL BE USED WITH ALL
MODELS.

Parts Included:

- (1) Wingman unit
- (4) Push Rivet

Installation:

NOTE: Skip steps 1, 2 & 5 for GS Model antennas mounted to a permanent structure.

- 1. Allow at least 10" of clearance between the Sensar and the nearest obstruction or the edge of the roof.
- 2. Raise the Sensar® antenna.
- 3. Remove the rubber bumpers from the bottom of the Sensar. This can be done with your fingers or pliers.
- 4. Line the holes in the Wingman up with the holes from which you removed the rubber bumpers. GS models will not have bumpers.
- 5. Insert the push rivets provided into these holes. Push the rivet tabs until they click and lock into place.
- 6. Lower Antenna.



Winegard Company • 3000 Kirkwood Street • Burlington, Iowa 52601-2000 • FAX 319/754-0787 • www.winegard.com Printed in U.S.A. © Winegard Company, 2008 2452167 Rev. 2 4/09

WINEGARD® Wingman[™]

RV-WING (white) GS-WING (gray) Digital Booster No tools required for installation.

No wires to connect.

NOT ALL PUSH RIVETS
WILL BE USED WITH ALL
MODELS.

Parts Included:

- (1) Wingman unit
- (4) Push Rivet

Installation:

NOTE: Skip steps 1, 2 & 5 for GS Model antennas mounted to a permanent structure.

- 1. Allow at least 10" of clearance between the Sensar and the nearest obstruction or the edge of the roof.
- 2. Raise the Sensar® antenna.
- 3. Remove the rubber bumpers from the bottom of the Sensar. This can be done with your fingers or pliers.
- 4. Line the holes in the Wingman up with the holes from which you removed the rubber bumpers. GS models will not have bumpers
- 5. Insert the push rivets provided into these holes. Push the rivet tabs until they click and lock into place.
- 6. Lower Antenna.

