

Replacing the Dome

Do not attempt to install this system in the rain or under any wet conditions. Moisture may affect electronics and void your warranty.

1. Loosen and remove all screws connecting the dome to the base. If applicable, remove the screws connecting the handle to the unit, and remove the handle. Set these screws aside.
2. Remove the existing dome.
3. Place the replacement dome on the base so that the holes in the dome align with the holes in the base. If installing a handle, align the holes in the handle with the holes in the base.
4. If replacing the dome on a roof-mounted unit, make sure that the decals on the dome face perpendicular to the main and secondary ports. If replacing the dome on a portable unit, make sure that the decal faces opposite the main and secondary ports.
5. Thread a screw through each hole, and tighten. Do not overtighten!

**For help, email help@winegard.com
or call 1-800-788-4417.**

Replacing the Handle

Note: this section is only applicable to certain Winegard® Carryout® antennas. If replacing the dome and handle, follow the instructions on the reverse side.

1. Loosen and remove the screws connecting the handle to the unit. Set these screws aside.
2. Remove the existing handle.
3. Align the holes in the replacement handle with the holes in the base.
4. Thread a screw through each hole, and tighten. Do not overtighten!

**For help, email help@winegard.com
or call 1-800-788-4417.**



Winegard Company • 3000 Kirkwood Street • Burlington, IA 52601 • 1-800-288-8094 • Fax 319-754-0787
www.winegard.com • Printed in U.S.A. ©2012 Winegard Company Rev1 7/12 2452267

Winegard and Carryout are registered trademarks of Winegard Company.