




Atwood Mobile Products Inc.
1120 North Main Street • Elkhart, IN 46514
PHONE: 574-264-2131 FAX: 574-262-2550
INTERNET: <http://www.askforatwood.com>

LITERATURE NUMBER **MPD 91620**

PRESSURE - TEMPERATURE RELIEF VALVE REPLACEMENT

www.dyersonline.com Effective 12/14/12

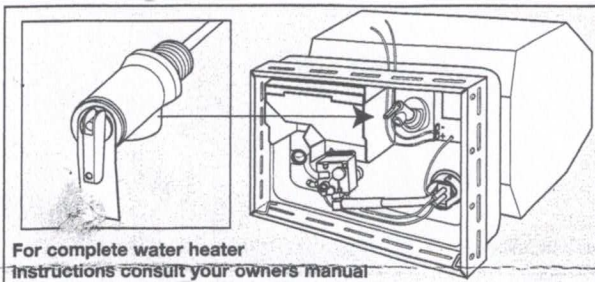

For complete water heater
instructions consult your owners manual

INSTALLATION PROCEDURES

1. Apply pipe sealant to external threads of valve if not already applied.
2. Screw firmly into tank fitting.



CAUTION PRODUCT FAILURE

- Do not operate water heater without water in tank.

3. Turn on water supply and check for leaks.
- NOTE: There should be a plastic insert in the pressure-temperature relief valve outlet. This should be removed from original valve and inserted into the outlet of replacement valve.




Atwood Mobile Products LLC
1120 North Main Street • Elkhart, IN 46514
PHONE: 574-264-2131 FAX: 574-262-2550
INTERNET: <http://www.askforatwood.com>

LITERATURE NUMBER **MPD 91620**

PRESSURE - TEMPERATURE RELIEF VALVE REPLACEMENT

Effective 12/14/12

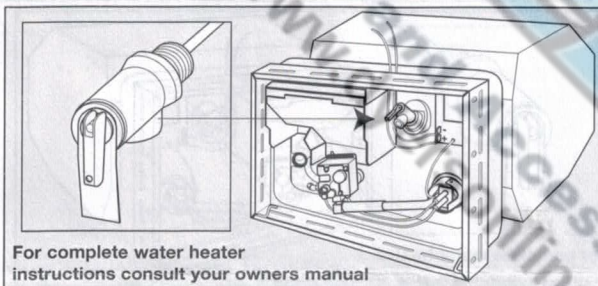

For complete water heater
instructions consult your owners manual

In recreation vehicles, a pressure temperature relief valve that weeps during the heating cycle may be a sign that it is necessary to restore the internal air pocket within the Atwood water heater.

To re-establish this air pocket refer to your Owners Manual.

SPECIFICATIONS:

- 1/2" or 3/4" pipe thread connection (tank outlet)
- 75 or 150 PSI pressure
- 210°F temperature



WARNING EXPLOSION

- Do not plug the pressure-temperature relief valve.
- Do not place a valve, plug or reducing coupling on outlet part of relief valve.

REMOVAL PROCEDURES



WARNING FIRE OR EXPLOSION

- Shut off gas supply at LP container before disconnecting a gas line.
1. Shut off LP gas.



WARNING SCALDING INJURY

- Turn off the water heater and allow the water to cool before opening pressure-temperature relief valve to establish air space. Storage water must be cool.
2. Turn off water supply and drain tank.
 3. Unscrew relief valve, using a pipe wrench or large adjustable wrench.

continued backside