


IMPORTANT

It is important when installing this blower wheel that the direction of rotation is observed. The wheel hub can be on either side of the center plate and should not be used as a reference. When the wheel is properly installed the vanes are sloped to the left and the rotation is counter-clock wise.

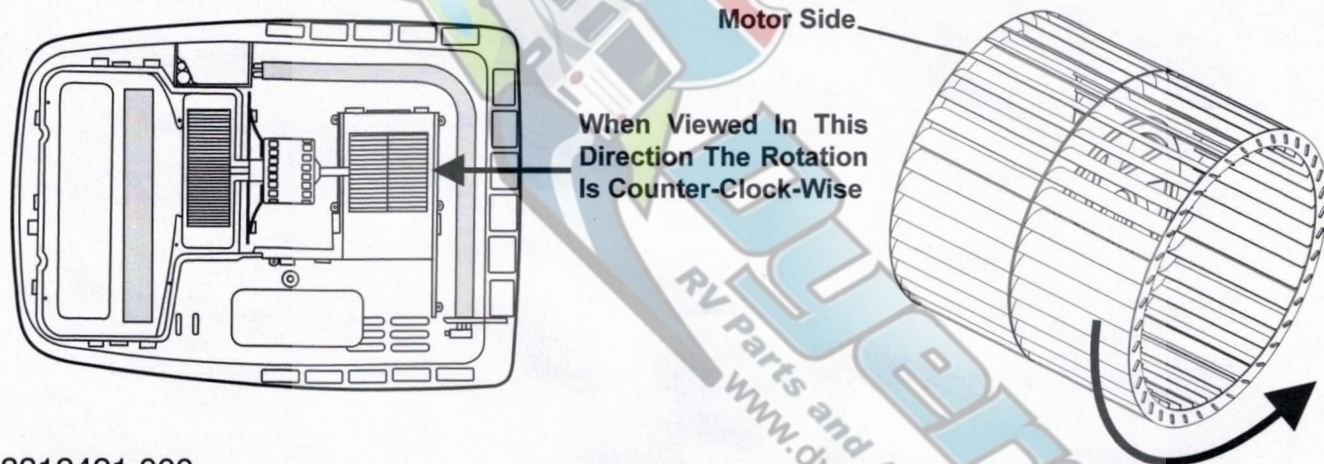

3312421.000

FORM No. 3312421.000 3/08

2008 DOMETIC CORPORATION

LAGRANGE, IN 46761