

SHOWERHEAD REPLACEMENT

Refer to the <u>Parts Breakdown Book</u> for replacement part numbers or <u>contact customer support</u> for help in finding a part

You may need several of these tools:

Allen wrench (5/16 or 7/32)

» Channel locks

Crescent wrench

Flathead screwdriver

Phillips head screwdriver

Pipe joint compound

- » Soft cloth
- » Teflon tape

No tools necessary

- 1. Unscrew old showerhead where it connects at the shower arm. There is no need to remove flange.
- 2. Wrap shower arm threads with teflon tape (optional).
- 3. Screw new showerhead onto shower arm. Tighten if necessary using channel locks. Wrap end of showerhead with soft cloth to protect finish.
- 4. Turn on water, check for leaks.

Part key:

No. Description

- 1 Showerhead
- 2 Flange
- 3 Shower arm

