



RECORD THIS INFORMATION FOR FUTURE
REFERENCE:

Model Number _____
Serial Number _____
Date Purchased _____
Retailer / Qualified Installer _____

OPERATING INSTRUCTIONS

3316023.000
BLUETOOTH SPEAKER

**FOR USE WITH:
POWER CHANNEL AWNING
POWER CHANNEL RAIL**



**Read these instructions carefully. These
instructions MUST stay with this product.**

Form No. 3316389.000 07/15
(French 3316390.000)
©2015 Dometic Corporation
LaGrange, IN 46761

USA
SERVICE OFFICE
Dometic Corporation
2320 Industrial Parkway
Elkhart, IN 46516

CANADA
Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA

**SERVICE CENTER &
DEALER LOCATIONS**
Please Visit:
www.eDometic.com

INTRODUCTION

This Bluetooth Speaker (hereinafter referred to as “speaker” or “product”) is designed and intended for use with Dometic Power Channel Awning or Dometic Power Channel Rail.


Use these instructions to ensure correct installation and function of product. Keep these instructions with the product for future reference.

Dometic Corporation reserves the right to modify appearances and specifications without notice.

TABLE OF CONTENTS

INTRODUCTION	2
DOCUMENT SYMBOLS	2
CONTROLS.....	2
A. Control Buttons.....	2
INSTALLATION	3
A. Attach Speaker To Power Channel.....	3
B. Remove Speaker From Power Channel.....	3
OPERATION.....	3
A. Pair Speaker.....	3

DOCUMENT SYMBOLS





 Indicates additional information that is **NOT** related to physical injury.


 Indicates step-by-step instructions.

CONTROLS

A. Control Buttons

See (FIG. 1).


1.  - **ON / OFF** (power) button
Long press to turn power ON or OFF.
2.  - **NEXT / INCREASE** button
Short press to play the next song.
Long press to increase the volume.
3.  - **PLAY / PAUSE** button
Press to play / pause the music.
4.  - **PREVIOUS / DECREASE** button
Short press to play previous song.
Long press to decrease the volume.

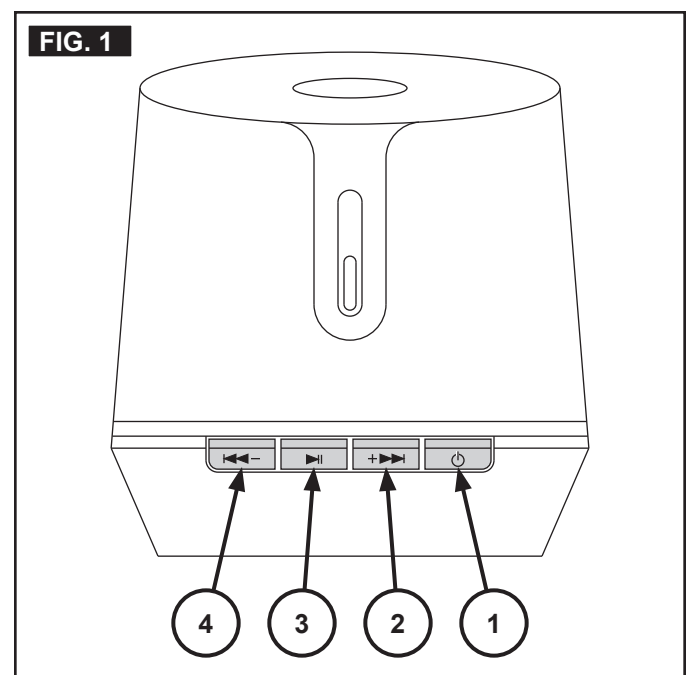



INSTALLATION

A. Attach Speaker To Power Channel

1. Align power bayonet with power channel slot. See (FIG. 2).
2. Insert power bayonet fully into power channel slot, pushing on speaker base (alignment indicator). See (FIG. 2).

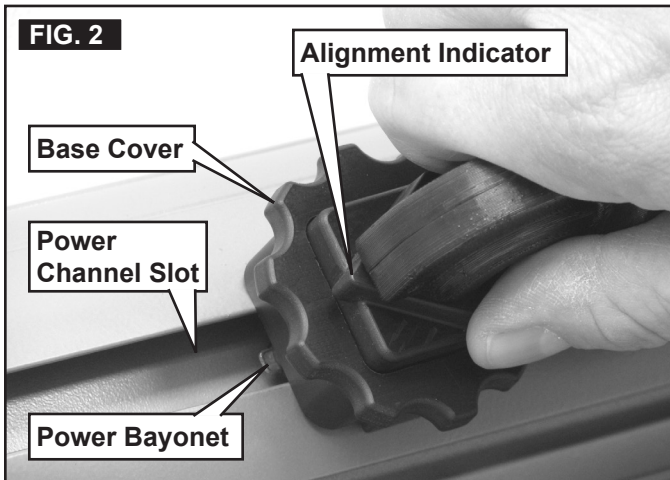


3. **NOTICE** Make sure alignment indicator on speaker base is pointed upward after installing into power channel. Otherwise, damage to speaker or power channel could occur. Rotate base 90°, so longest lobe of power bayonet, and alignment indicator, are pointed upward (toward fabric of awning or groove of power channel rail). See (FIG. 3).

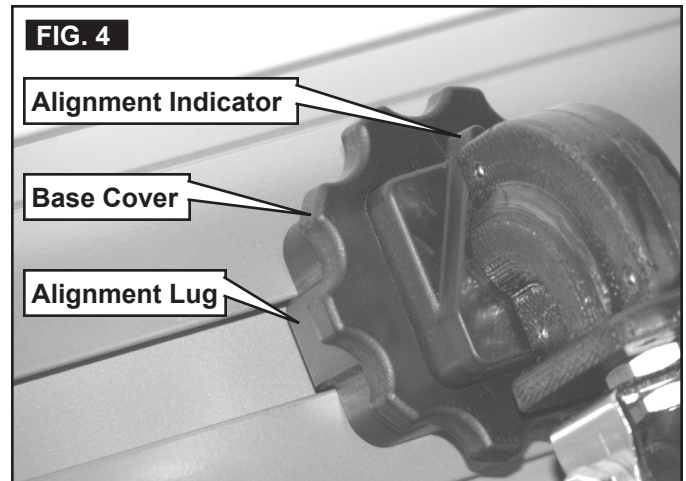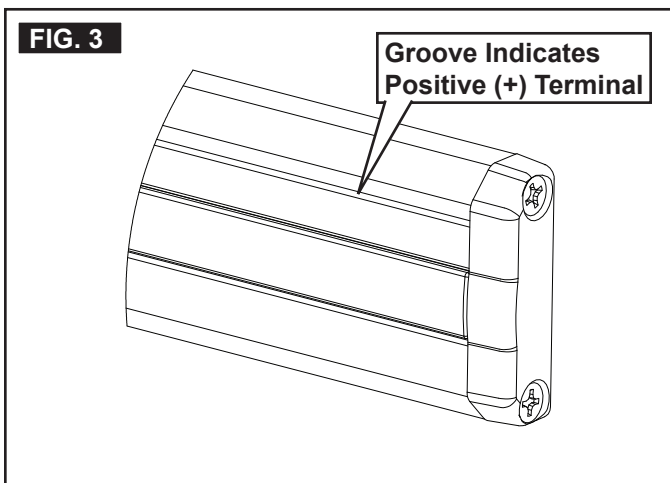

4. When speaker base is properly aligned, alignment lugs on sides of base cover will sit into power channel slot, providing a positive lock. See (FIG. 4).

B. Remove Speaker From Power Channel

1. While pulling back on spring loaded, scalloped base cover, rotate base 90° (alignment indicator in line with power channel slot). See (FIG. 5).

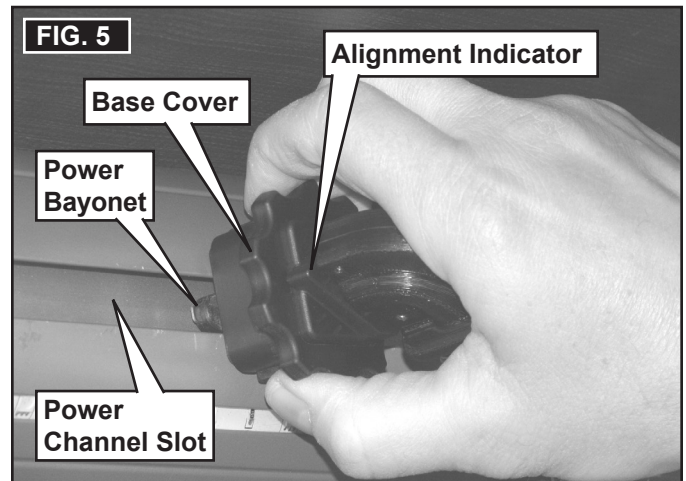

2. Remove speaker from power channel slot and release spring loaded base cover. See (FIG. 5).

OPERATION

1. **i** Speaker **MUST** be installed into Dometic Power Channel to be used. See "A. Attach Speaker To Power Channel" on page (3).

A. Pair Speaker

1. **i** Press "ON / OFF" button for 2 - 3 seconds (long press). Speaker will respond "ready to pair".

2. Follow the instructions for your phone or mobile device to allow your device to search for a new Bluetooth connection.
3. Select "Dometic BT" on the Bluetooth device list on your phone or mobile device. Speaker will respond "paired successfully" when sync is completed.