

Stop removing fuses.



Easy-to-install Fuse Bypass Switches with heavy-duty wiring designed to fit most tow vehicles.

FUSE BYPASS SWITCH

A Fuse Bypass Switch provides a convenient alternative to the constant removal and re-installation of the fuse when changing from the towed mode to driving mode.

RV'ers risk draining the battery on many vehicles when flat towing. A bypass switch eliminates this risk.

Please see the attached fit application guide for specific model information.

BLUEOX.COM • 800-228-9289

f [facebook.com/blueoxproducts](https://www.facebook.com/blueoxproducts) **t** [YouTube](https://www.youtube.com/blueoxproducts)



FUSE BYPASS SWITCHES

Make & Model	Year(s)	Fuse Type	Part #	Notes
Acura				
All towable	All	ATM	BX88272	See owner's manual for fuses to be removed
Buick				
Enclave	2007-2008	50 amp fuse	BX88274	50 amp Batt1 fuse is removed from UBEC (underhood busseled electrical box)
Enclave	2009 - 4/30/2012	(1)50 amp HD & (1)15 amp mini fuses	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp ECM fuses are removed from UBEC box.
Enclave	5/1/2012 & newer 2012	(1)50 amp fuse & (2)15 amp mini fuses	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 & 20 amp ECM fuses are removed from UBEC box in a specific sequence please refer to your owner's manual
Enclave	2013-15	(1)50 amp fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 for UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed from battery compartment under floor behind front passenger seat
Cadillac				
SRX	2010-11	(3)15 amp	(1)BX88272 & (1)BX88273	BCM1, 2 & 3 fuses must be removed
Chevrolet				
Captiva	2012-2013	ATM	BX88271	#32 DLIS Fuse or F14 POW MODING fuse
Captiva Sport	2014	ATM	BX88271	F14 POW MODING fuse
Cobalt	2006-2010	ATM	BX88271	See owner's manual for fuses to be removed
Cruze	2011	ATM	BX88271	Ignition sensor
Cruze	2012 (some)	ATM	(2)BX88273	Remove fuse #22, #23, #24 & #25
Cruze	2013	ATM	BX88271	Ignition sensor
Cruze	2014	ATM	(1) BX88272 & (1) BX88273	Fuse #25 is not used, therefore, (1) single & (1) double circuit Fuse ByPass Switch is recommended
Equinox	2008	ATM	BX88272	Certain 15 amp applications
Equinox	2010-15	5 amp ATM	BX88271	#32 DLIS fuse
HHR	2006-2011	ATM	BX88271	Ignition sensor
Malibu	2001-2003	(2)ATM	BX88273	Leave 25 amp fuse in (wipers). Use for (2) 10 amp fuses
Malibu	2006-2012	ATM	BX88272	Ignition sensor
Malibu	2014-15	ATM	(1) BX88273 & (1) BX88271 (Key Ign Only)	Fuses (#8,#22,#24) - Keyed Ignition Fuses (#8,#24) - Push Button Ignition
Orlando	2014	ATM	(2) BX88273	Remove fuse #21, #22, #23 & #24
Pickup	2000-2011	ATM	BX88272	See owner's manual for fuses to be removed
Sonic	2012-2015	ATM	BX88271	#1 DLIS Fuse
Spark (No EV)	2013-14	ATM	BX88271	#1 DLIS Fuse
Tracker	2003	ATM	BX88272	10 amp fuse
Trailblazer	all towable	ATM	BX88272	See owner's manual for fuses to be removed
Traverse	2007-2008	50 amp fuse	BX88274	50 amp Batt1 fuse is removed from UBEC box.
Traverse	2009 - 4/30/2012	(1)50 amp HD & (1)15 amp mini	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp fuses are removed from UBEC box.
Traverse	5/1/2012 & newer 2012	50 amp HD & (2) 15 amp mini	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 amp ECM & 20 amp ECM1 fuse to be removed in specific sequence from UBEC box.
Traverse	2013-15	(1)50 amp fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 from UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed frm battery compartment under floor behind front passenger seat

FUSE BYPASS SWITCHES

Make & Model	Year(s)	Fuse Type	Part #	Notes
<u>Dodge</u>				
Dakota 4x4	2005	ATM-10 amp Underhood	BX88271	Mount on top of fuse box cover
<u>Ford</u>				
Edge / Flex	All	ATM-20 amp	BX88272	Main ignition fuse
Escape/Mariner	All	ATM-20 amp	BX88272	Main ignition fuse
Explorer	2007-2011	ATM-15 amp	BX88272	See owner's manual for fuses to be removed
Fusion	All towable	3 fuses	(1)BX88272 & (1)BX88273	See owner's manual for fuses to be removed
<u>GMC</u>				
Acadia	2007-2008	50 amp FMX	BX88274	50 amp Batt1 fuse is removed from UBEC box.
Acadia	2009 - 4/30/2012	(1)50 amp FMX & (1)15 amp ATM	(1)BX88274 & (1)BX88271	50 amp Batt1 & 15 amp ECM fuses are removed from UBEC box.
Acadia	5/1/2012 & newer 2012	(1)50 amp HD & (2)15 amp ATM	(1)BX88274 & (2)BX88271	50 amp Batt1, 15 amp ECM & 20 amp ECM1 fuses are removed in specific sequence from UBEC box.
Acadia	2013-15	(1)50 amp HD fuse & (2)15 amp ATC/ATO fuses	(1)BX88274 & (1) BX88294	50 amp Batt1 from UBEC box. 15 amp ECM & 15 amp OnStar fuse to be removed from battery compartment under floor behind front passenger seat
Safari	2003	10 amp ATM	BX88272	See owner's manual for fuses to be removed
Terrain	2010-2015	5 amp ATM	BX88271	#32 DLIS fuse
<u>Honda</u>				
CRV	1996-2006	ATM	BX88272	See owner's manual for fuses to be removed
CRV	Most 2007-2014	Micro ATM	BX88272	Remove #19 7.5 amp ACC (radio) fuse. Customer to supply 7.5A ATM fuse to fit fuseholder in switch harness
CRV	Some 2012-2014	Micro ATM	BX88273	Remove #19 7.5 amp ACC (radio) and #20 7.5 amp ACC keylock (batt) fuses. Customer to supply (2) of 7.5A ATM fuses to fit fuseholders in switch harness
Fit	2009-14	Micro ATM	BX88272	Customer to supply 20 amp fuse to replace the existing 30 amp fuse in car to fit fuseholder in switch harness
Pilot	2009-12	Micro ATM	BX88272	Customer to supply fuse to match rating of fuse in car to fit fuseholder in switch harness
<u>Jeep</u>				
Wrangler	1997	ATM	BX88272	10 amp, tight fuse panel located behind glovebox
<u>Lexus</u>				
RS350	2009	ATM	BX88272	See owner's manual for fuses to be removed
<u>Oldsmobile</u>				
Alero	2001-2003	(2) ATM	(2)BX88273	Leave 25 amp fuse in (wipers). Use for (2) 10 amp fuses
<u>Pontiac</u>				
G6	2003-2006	30 amp FMX	BX88274	BCM
G6	2005	2 amp ATM	BX88272	See owner's manual for fuses to be removed
G6	2007-2011	ATM	BX88272	See owner's manual for fuses to be removed

FUSE BYPASS SWITCHES

Make & Model	Year(s)	Fuse Type	Part #	Notes
<u>Saturn</u>				
Aura	2007-2009	ATM	BX88272	See owner's manual for fuses to be removed
Outlook	All	50 amp square	BX88274	Under hood fuse panel
Vue	2003-2004	ATM	BX88272	See owner's manual for fuses to be removed (NO 30 Amp Maxi Fuse)
Vue	2008-2009	ATM	BX88271	See owner's manual for fuses to be removed
<u>Subaru</u>				
Legacy GT Spec B	2008	ATM-15 amp	BX88272	Passenger compartment