BOOT INSTALLATION INSTRUCTIONS

(Wiring Device Cover)

IN CASE OF SALT WATER IMMERSION
DISCONNECT FROM POWER SOURCE. RINSE PLUG/CONNECTOR
THOROUGHLY IN FRESH WATER, SHAKE OR BLOW OUT EXCESS WATER,
AND ALLOW TO DRY. SPRAY WITH MOISTURE DISPLACEMENT BEFORE RE-USE.



1 Cut boot at first line for cable greater than 10/3 (or greater than 5/8 in. Dia.).




2 Apply soap solution to boot end and invert by pushing cord end against boot end. Push cord about 12 in. through boot



3 A tug in the opposite direction returns boot to its original shape. Before wiring, push cord through the plug/connector housing.



4 Strip cord and attach to device (see device's instructions).

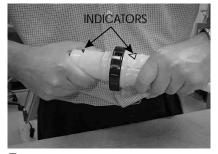

5 Align boot's triangle indicator and device's triangle indicator.



6 Be sure boot is on as far as it will go.

MARINCO

01/01

2655 Napa Valley Corporate Drive Napa, California 94558 (707) 226-8600 FAX: (707) 226-9670

For these instructions and more information please visit website: www.marinco.com 200695

BOOT INSTALLATION INSTRUCTIONS

(Wiring Device Cover)

IN CASE OF SALT WATER IMMERSION
DISCONNECT FROM POWER SOURCE. RINSE PLUG/CONNECTOR
THOROUGHLY IN FRESH WATER, SHAKE OR BLOW OUT EXCESS WATER,
AND ALLOW TO DRY. SPRAY WITH MOISTURE DISPLACEMENT BEFORE RE-USE.



1 Cut boot at first line for cable greater than 10/3 (or greater than 5/8 in. Dia.).



2 Apply soap solution to boot end and invert by pushing cord end against boot end. Push cord about 12 in. through boot.



3 A tug in the opposite direction returns boot to its original shape. Before wiring, push cord through the plug/connector housing.



4 Strip cord and attach to device (see device's instructions).



5 Align boot's triangle indicator and device's triangle indicator.



6 Be sure boot is on as far as it will go.



2655 Napa Valley Corporate Drive Napa, California 94558 (707) 226-8600 FAX: (707) 226-9670