





CANOPY EXTENSIONS AND DIMENSIONS

Information for new and replacement canopies used in Australia

The canopy extension is measured from the awning rail polyrod to the first roller tube polyrod.

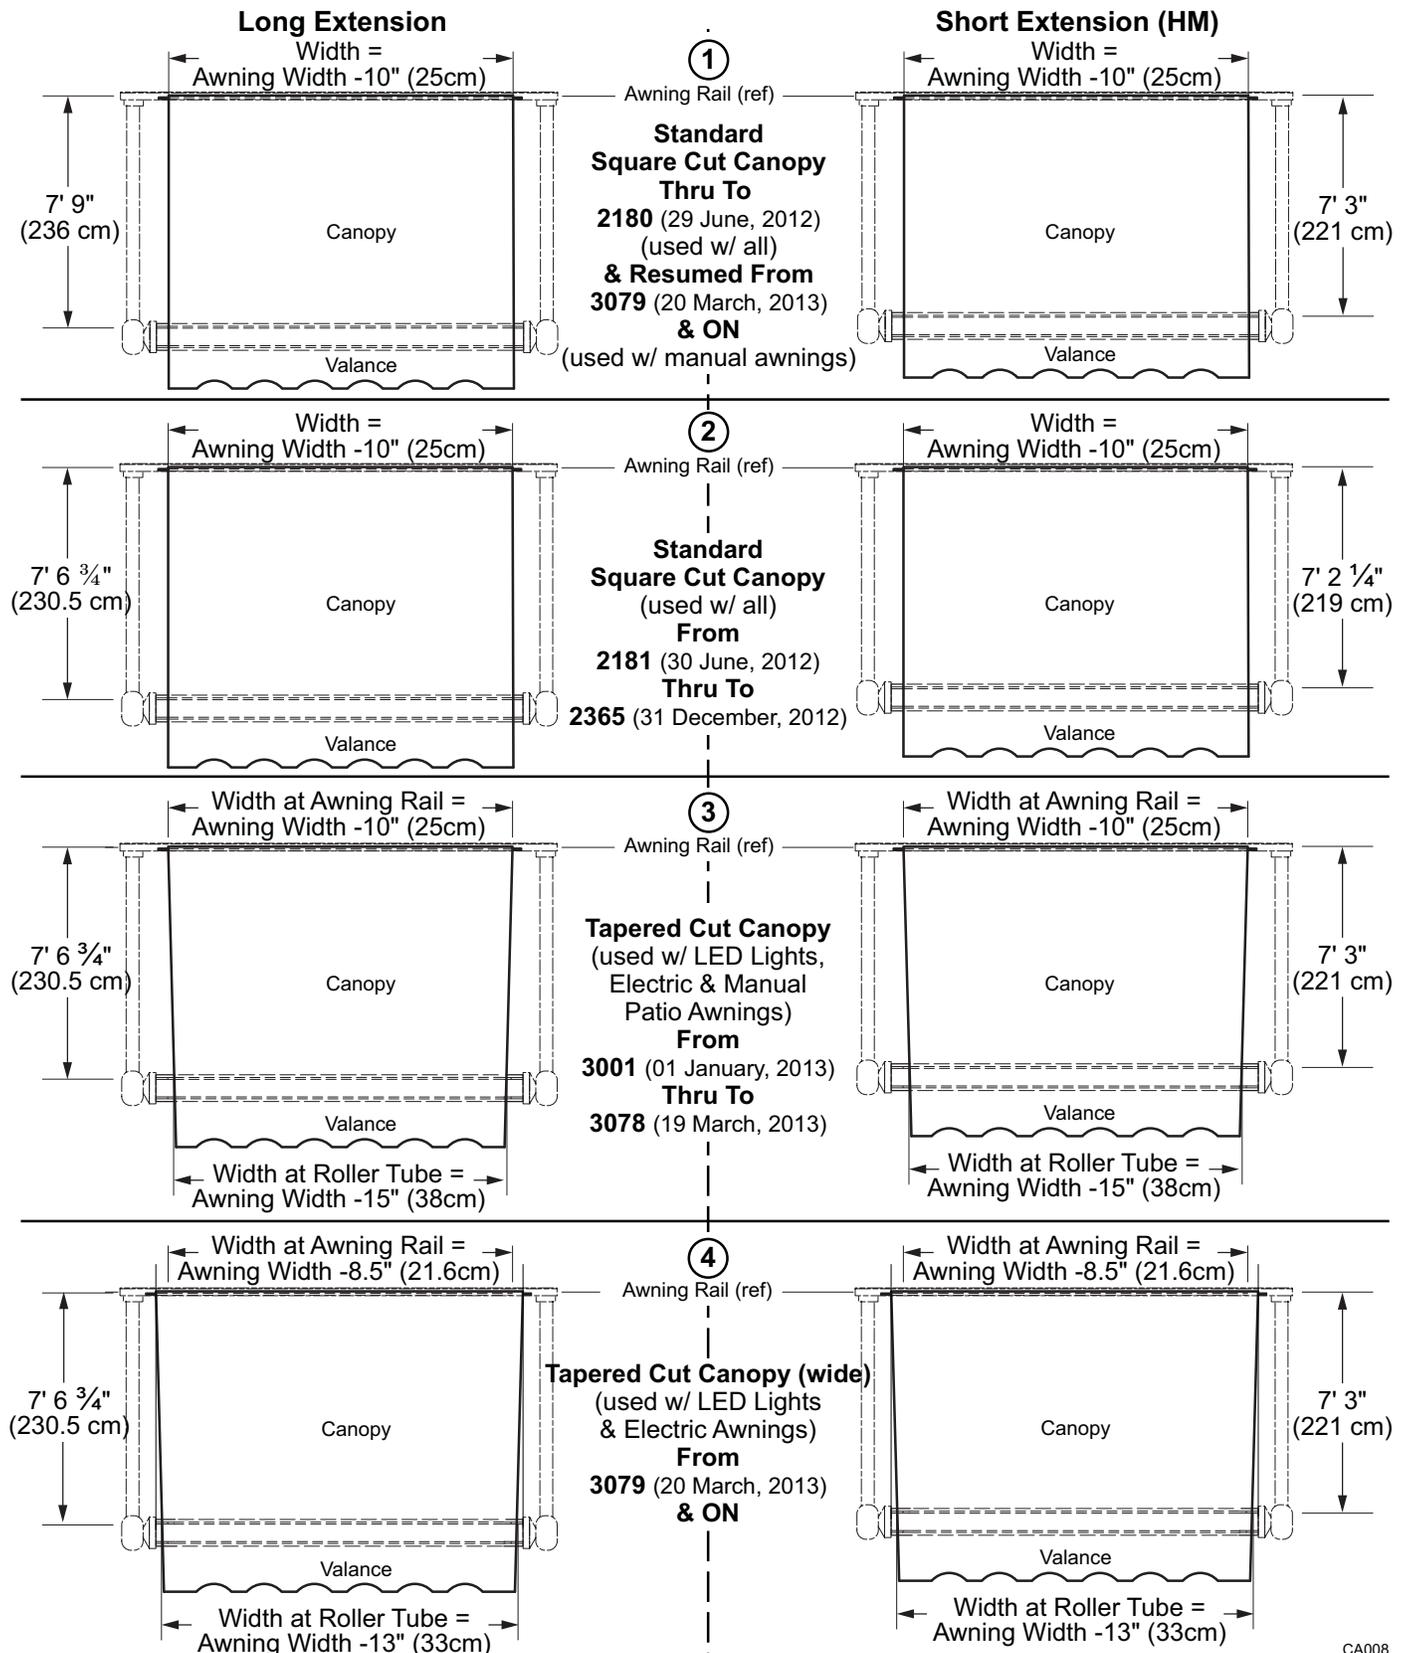


CA008

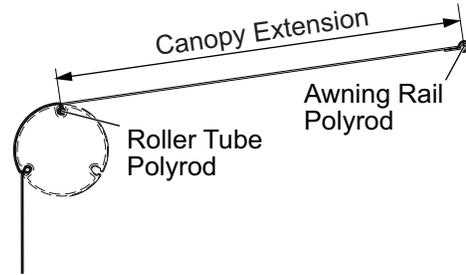

CA008a

Notes:

1. (refer to diagram on page 1) Square Cut Replacement Canopies.
 - Version 1 used for replacement canopies: Thru to 2180 (29 June, 2012) and resumed From 3079 (20 March, 2013) & ON
 - Version 2 used for replacement canopies: From 2181 (30 June, 2012) Thru to 3078 (19 March, 2013)
2. When ordering replacement canopies, provide the awning's center of arm to center of arm measurement.
3. If the awning center of arm to center of arm measurement is not available, measure the length of the existing canopy fabric at the awning rail polyrod.
4. Carefree offers two types of field replacement canopies available for patio awnings and similar style awnings manufactured by other companies.
 - For Carefree awnings, the canopy is made as a ONE-PIECE (valance and canopy are one piece) or as a TWO-PIECE (canopy and valance are separate).
 - For other awning brands, the canopy is made in TWO PIECES (canopy and valance are separate). This is required because of the distance between slots in the roller tube.

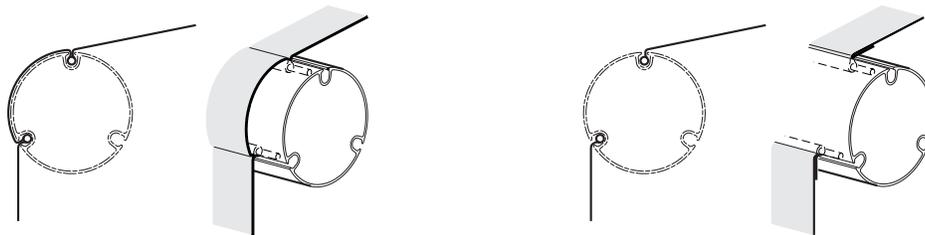


1-Piece

2-Piece

CA003

5. Tapered canopies are one-piece construction. Two-piece replacement canopies are not tapered.
6. Dimensions are $\pm 1/2"$ (1.25cm).

Awning Width is measured from Center of Arm to Center of Arm

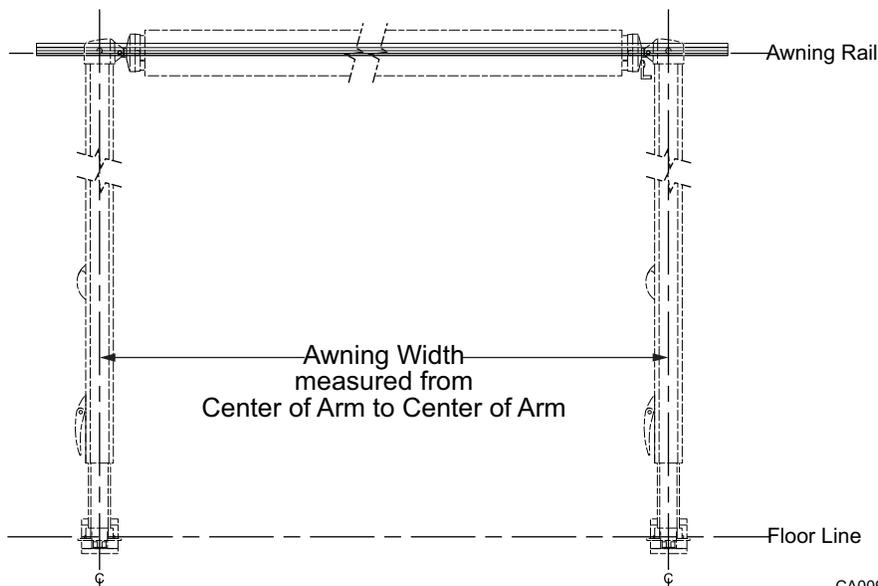

CA009