

Capture Plates are a required component of the SuperGlide hitch system. When the trailer is hooked up to the hitch, the Capture Plate's wedge isolates the king pin from turning in the fifth wheel plate, causing the Cam Assembly to activate and allowing the SuperGlide to move as turns are being made. Most applications slip over the king pin and are held in place by a set screw. Follow the instructions below to determine your correct Capture Plate.

1) Find the manufacturer's name and model number located on your pin box.


2) Then find the Quick Connect part number that corresponds to that information.

3) To ensure correct fit, make the necessary A, B and C measurements:

A: Measure the king pin plate from side-to-side. This is the most important measurement. Be sure that this measurement is no more than 1/16" less than the measurement listed in the column below.

B: Measure from the leading edge of the king pin to the leading edge of the king pin plate.

C: Measure from the rear edge to the leading edge of the king pin plate

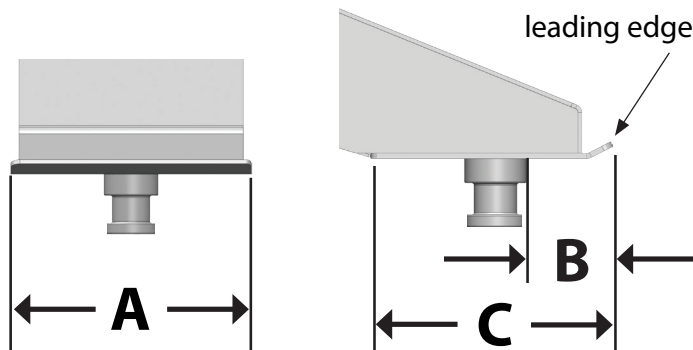

Quick Connect
CAPTURE PLATE

Sizing Chart (recommended)

King Pin Box Manufacturer	MFR#	King Pin Box Model #	Measurement A	Measurement B	Measurement C
5th Airborne (medium)	331709	Most Models	10-1/2"	6-7/8"	14-1/4"
5th Airborne	331759	Most Models	12"	7-7/8"	19-7/8"
Demco (Universal will not work)	331750	Most Models	10-3/4"	5"	11-7/8"
Demco (Universal will not work)	331751	Most Models	11-1/4"	5-1/8"	12-1/16"
Dexter	331731	Most Models	12"	5-9/16"	12-1/4"
Fabex	331720	500's, 765, 770*	13-1/2"	3-1/4"	9-1/4"
Fabex	331706	Most Models	12"	4-5/8"	11-3/8"
Leland	331730	Most Models	14"	5-1/2"	12-1/4"
Lippert (long)	331704	1621*	12-3/4"	3-3/8"	8-7/8"
Lippert (long)	331711	1621 HD*	12-3/4"	4"	8-7/8"
Lippert (long)	331705	1621*	13-1/4"	3-3/8"	8-7/8"
Lippert (medium)	331705	1116*	13-1/4"	3-1/2"	9-3/16"
Lippert (long)	331705	1716*	13-1/4"	3-1/4"	8-7/8"
Lippert	331710	0719**	12-3/4"	6-3/8"	12-1/4"
MOR/ryde (don't use Universal or Multi-fit)	331707	Rubber Cushion	13-1/2"	7-5/16"	17-1/2"
Trailair Rota-Flex (don't use Universal or Multi-fit)	331756	Most Models	13-3/8"	5-3/8"	11-7/16"
Trailair Rota-Flex (don't use Universal or Multi-fit)	331760	Most Models	13-5/8"	5"	11-7/16"
Trailair FlexAir	331761	Most Models	13-1/4"	6-1/8"	12-3/4"
Trailair Tri Glide Airbag/Shock Pin Box	331757	Tri Glide Only	12-3/4"	5-15/16"	ALL
Trailair Airbag/Shock Pin Box	331758	Most Models	13-3/8"	7-3/8"	13-1/2"
Reese Revolution	331721	10K Pin Box	10-1/2"	4-1/4"	11"
Reese Revolution (*for 16K with spacers)	331722	16K or 21K Pin Box	13" or *12-1/2"	4-1/4"	11-3/4"

Multi-fit and Universal Capture Plates

Multi-fit Capture Plate	3365	* Fits the indicated pin boxes above	12-3/4" through 13-1/2" and 14"	2-9/16" — 4"	ALL
Multi-fit Capture Plate	3366	** Fits the indicated pin boxes above	12, 12-1/4", 12-3/4"	5-3/16" — 6-5/8"	ALL
Universal Capture Plate Kit	3317	INCLUDES: Universal Capture Plate, Fore & Aft Plate Extensions, Knee Braces, & Hardware			