


SKM-008 TRAV'LER™ MOUNTING PLATE

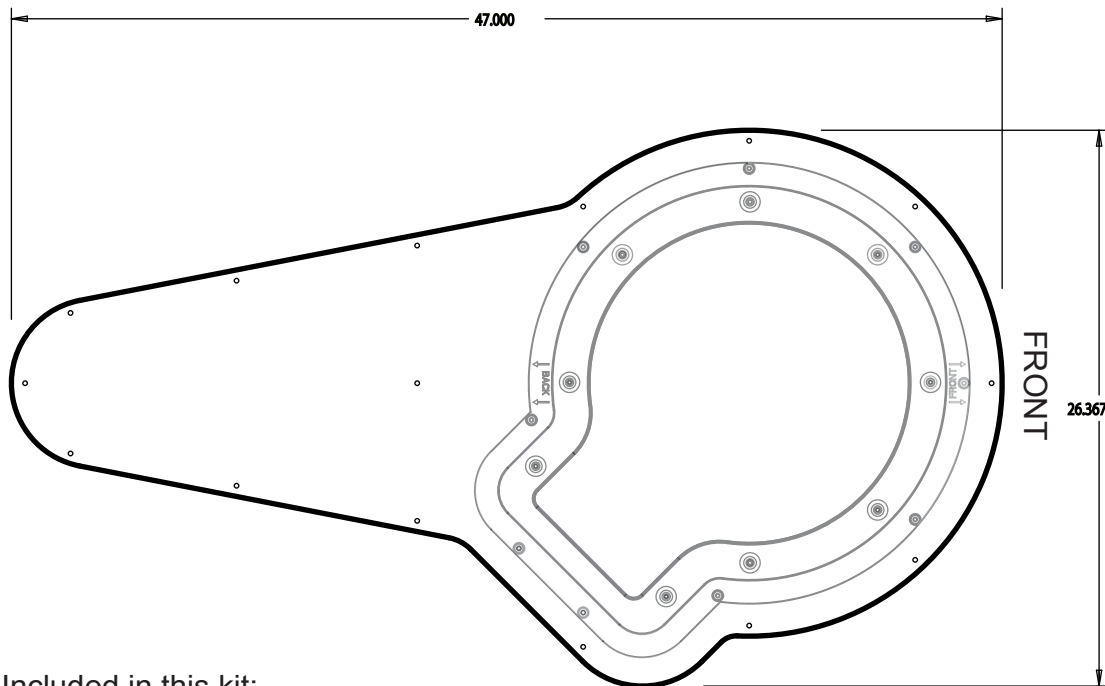

Included in this kit:

Mounting Plate
Instruction Sheet
15 Mounting Screws

1. Determine where the TRAV'LER will be mounted on the roof. Please refer to the TRAV'LER installation manual for more information. **Warning: Failure to do so may result in damage to the TRAV'LER or the objects on the roof.**
2. Place the SKM-008 Roof Plate on the roof and put a small amount of approved sealant* over each of the 15 outer screw holes on the SKM-008 plate.
3. Screw the mounting plate to the roof using the supplied screws. Running down through the sealant.
4. Cover each of the screw heads with sealant.
5. Allow the sealant to set before installing the TRAV'LER to the plate.
6. The TRAV'LER mounts directly to the plate, simply line up the screw holes on the TRAV'LER with those on the mounting plate and follow the instructions in the TRAV'LER manual. The SKA-008 is designed for use with the screws provided with the TRAV'LER mount.

* Winegard recommends consulting the coach manufacturer to determine the appropriate sealant for your roof.

