
## **Water Tank Kit**

## Models: 11914, 11915, 11916, 11917 Installation and Operation Instructions

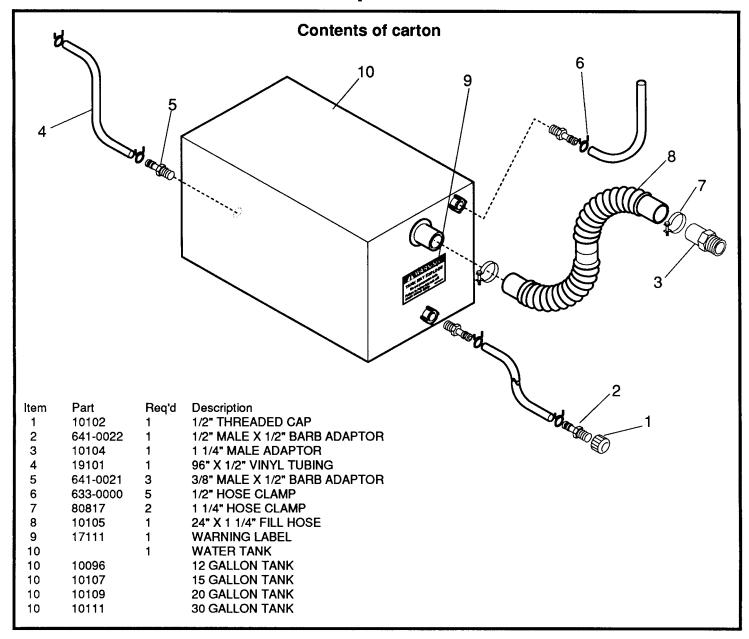

Tools required - Slotted screwdriver, Cresent wrench, and Pliers



H&H ENGINEERING

## **Assembly instruction**


Mount tank securely to vehicle to prevent loosing and damage to tubing and clamps.

Push fill hose over inlet until it is snug against tank. Secure with 1 1/4" clamp.

Screw adaptor into fill inlet. Push fill hose over adaptor and secure with 1 1/4" clamp.

Cut off 12" of tubing for vent line. Screw adaptor into tank (vent port). Secure tubing to adaptor with 1/2" hose clamp.

For proper venting position end of tube higher than tank.

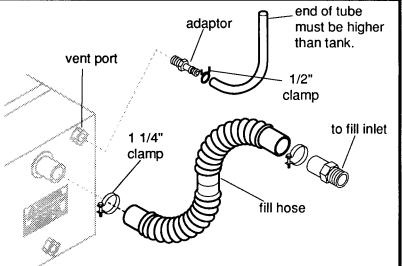


Screw adaptor into tank (supply port).


Secure tubing to adaptor with 1/2" hose clamp.

Route tube to vehicle water pump.

Cut off excess tubing(excess will be used for (drain line).

Secure tube to water pump with 1/2" hose clamp.

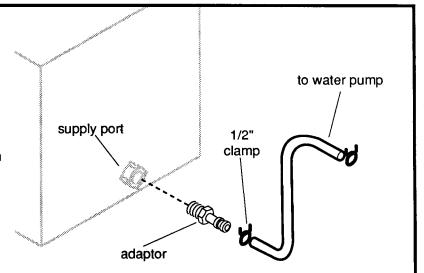

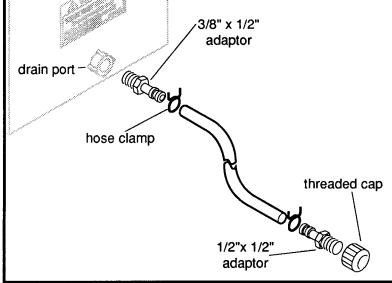

Screw adaptor into tank (drain port).

Secure excess tubing to adaptor with 1/2" hose clamp.

Secure large adaptor to tubing with 1/2" hose clamp.

Put cap on.

Take cap off to drain.