


## THERMAL CUT-OFF REPLACEMENT

[www.dyersonline.com](http://www.dyersonline.com) Effective 04/06/09

### PART NUMBER MPD 93866 - Spark Ignition Atwood Water Heaters

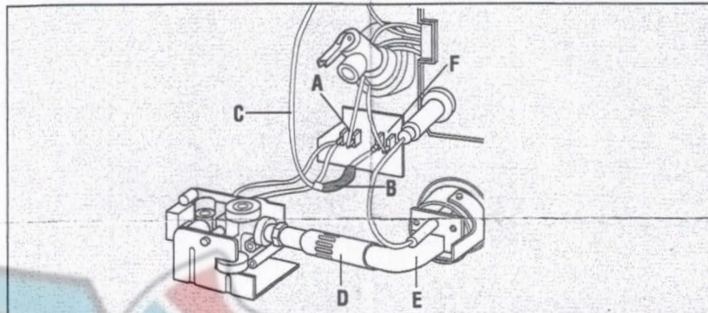

For complete water heater instructions consult MPD - 93050, 93755, 93756, 93758.


#### INSTALLATION PROCEDURES:

1. Connect new thermal cut-off back onto thermostat-F.
2. Connect brown incoming power wire-C to thermal cut-off.
3. Position the thermal cut-off-B in its original position.
4. Re-connect the valve lead to the ECO terminal-A.
5. Turn water heater switch ON and check for ignition.

## THERMAL CUT-OFF REPLACEMENT

Effective 04/06/09

### PART NUMBER MPD 93866 - Spark Ignition Atwood Water Heaters

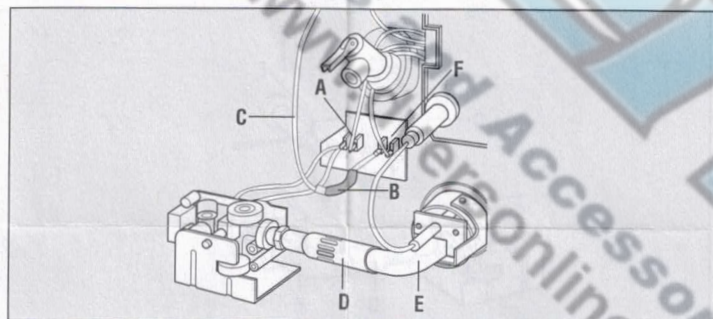

For complete water heater instructions consult MPD - 93050, 93755, 93756, 93758.

#### **CAUTION** ELECTRICAL DAMAGE

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

#### REMOVAL PROCEDURES:

1. Turn OFF water heater switch.
2. Remove valve lead from left-hand ECO terminal-A.
3. Note the position of the thermal cut-off-B.
4. Remove brown incoming power wire-C from thermal cut-off.

5. Remove and discard thermal cut-off-B from thermostat-F.
6. Remove the air shutter screw-D and slide the air shutter right.
7. Run a flexible wire brush through the burner tube-D & E until it is visible at the end of the burner tube.
8. When you are sure the burner tube is completely clean, return the air shutter to its original position, and replace the screw.

continued backside