





Making Water Work Beautifully
Genuine Replacement Parts and Accessories

EXTERIOR SHOWER REPLACEMENT DOOR

#9-370-2 FITS PHOENIX AND UTOPIA EXTERIOR SHOWER BOXES



Key hole horizontal

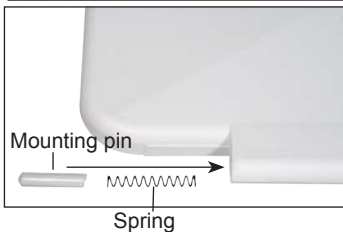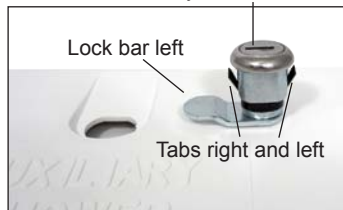

Close and lock door with right pin in mounting hole



Use a stiff, flat tool to compress the pin and slide it into place.



1. Position the door so the writing is in the correct direction for normal reading.
2. With the locking bar facing left, the key hole in the horizontal position and the tabs on the left and right of the lock, slide the locking bar into the hole and push the lock firmly into the hole until the tabs snap into place.
3. Drop the spring and mounting pin into the left hole at the bottom of the door.
4. Slide the right hand pin (unsprung side) into the mounting hole on the box.
5. Close and lock the door
6. Use a thin stiff tool such as a flat head screw driver to push the pin in. Apply pressure to the corner of the door to slide it into place. Remove flat tool. The pin should pop into the mounting hole.

Contents: (1) each: Door, Spring, Pin, Lock, Key

An American Family Tradition Since 1894

Phoenix Products, Inc. 800-222-6041 • phoenixfaucets.com

