


DOOR PANELS FOR REFRIGERATOR MODELS DM2652 RM2652 DM2662 RM2662 RM3662 RM3663 DM2852 RM2852 DM2862 RM2862 DM3862 RM3862 RM3863 RM4872 RM4873

USA

SERVICE OFFICE Dometic Corporation 1120 North Main Street Elkhart, IN 46514

For Service Center Assistance Call: 800-544-4881

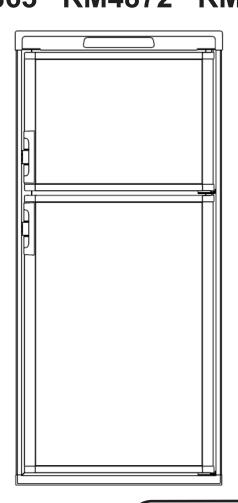

INSTALLATION INSTRUCTIONS

DOOR PANELS 3106863.073(X) 3106863.081(X)

REVISION A

Form No. 3312203.171 07/18 ©2018 Dometic, LLC LaGrange, IN 46761

MOUNTING THE DOOR PANEL(S)

The refrigerator is normally delivered without door panel(s). Before starting the mounting work, read this instruction thoroughly and check that the panel dimensions are in compliance with those given in the following table:

PANEL DIMENSIONS max. thickness 5/32" (4 mm)						
		Height max min		Width max min		
UPPER						
		mm	403	401	527	524
		inch	15-27/32	15-25/32	20-3/4	20-5/8
LOWER/SINGLE DOOR						
1	RM2652 RM2662	mm	827	825	527	524
		inch	32-9/16	32-1/2	20-3/4	20-5/8
	RM2852 RM2862 RM3862	mm	983	981	527	524
		inch	38-11/16	38-5/8	20-3/4	20-5/8

With screws


To mount the panel, follow these steps:




- 1. Open the door 90 degrees.
 - 2. On new refrigerators, the decoration strip is taped inside the door; if installed on the door, remove the door decoration strip (2) by removing its three

NDR1292: Fresh food compartment door - remove three screws (1). Freezer compartment door- remove two screws.

- 3. Insert the vertical edges into the grooves of the door frame (3).
- 4. Push the panel downwards so that the lower horizontal edge of the panel (4) is fitted into the bottom grove (5).
- 5. Put the decoration strip across the door so that the gap is covered. Secure the decoration strip with the screws removed in step 2.

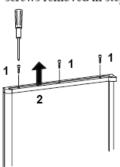

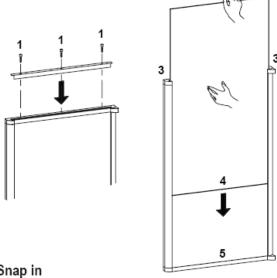

Snap in

To mount the panel, follow these steps:



- 1. Open the door 90 degrees.
 - 2. On new refrigerators, the decoration strip are taped inside the door; if installed on the door, remove the door decoration strip (2) by gently pushing the four tabs away with a flat blade screwdriver (1).
 - 3. Insert the vertical edges into the grooves of the door frame (3).
 - 4. Push the panel downwards so that the lower horizontal edge of the panel (4) is fitted into the bottom grove (5).
 - 5. Snap in the decoration strip (2).

