

WHAT SIZE HITCH DO I NEED?

BulletProof Hitches™ has developed this guide to assist in selecting the correct hitch for your vehicle. **If you have any questions feel free to give us a call at 941-300-7220.**

Step 1

Measure the opening of the receiver tube (**Figure A**) to determine what size shank your vehicle requires. It will be 2", 2.5" or 3" (Please note that 3" is applicable to some 2017 & newer Ford Super Duty trucks and some RVs/Semis only)

Step 2

Park your vehicle on level ground and measure from the ground to the bottom inside of the receiver tube (**Figure B**), then take that measurement and apply it to the information below. As you can see in the example, this truck would require our 6" drop.

Receiver height as measured:

Under 13" requires a hitch in the rise position, call us to help you

13"-15" requires 2" drop/rise hitch

16"-18" requires 4" drop/rise hitch

19"-21" requires 6" drop/rise hitch

22"-24" requires 8" drop/rise hitch

25"-27" requires 10" drop/rise hitch

28"-30" requires 12" drop/rise hitch

31"-33" requires 14" drop/rise hitch

34"-36" requires 16" drop/rise hitch

Figure A


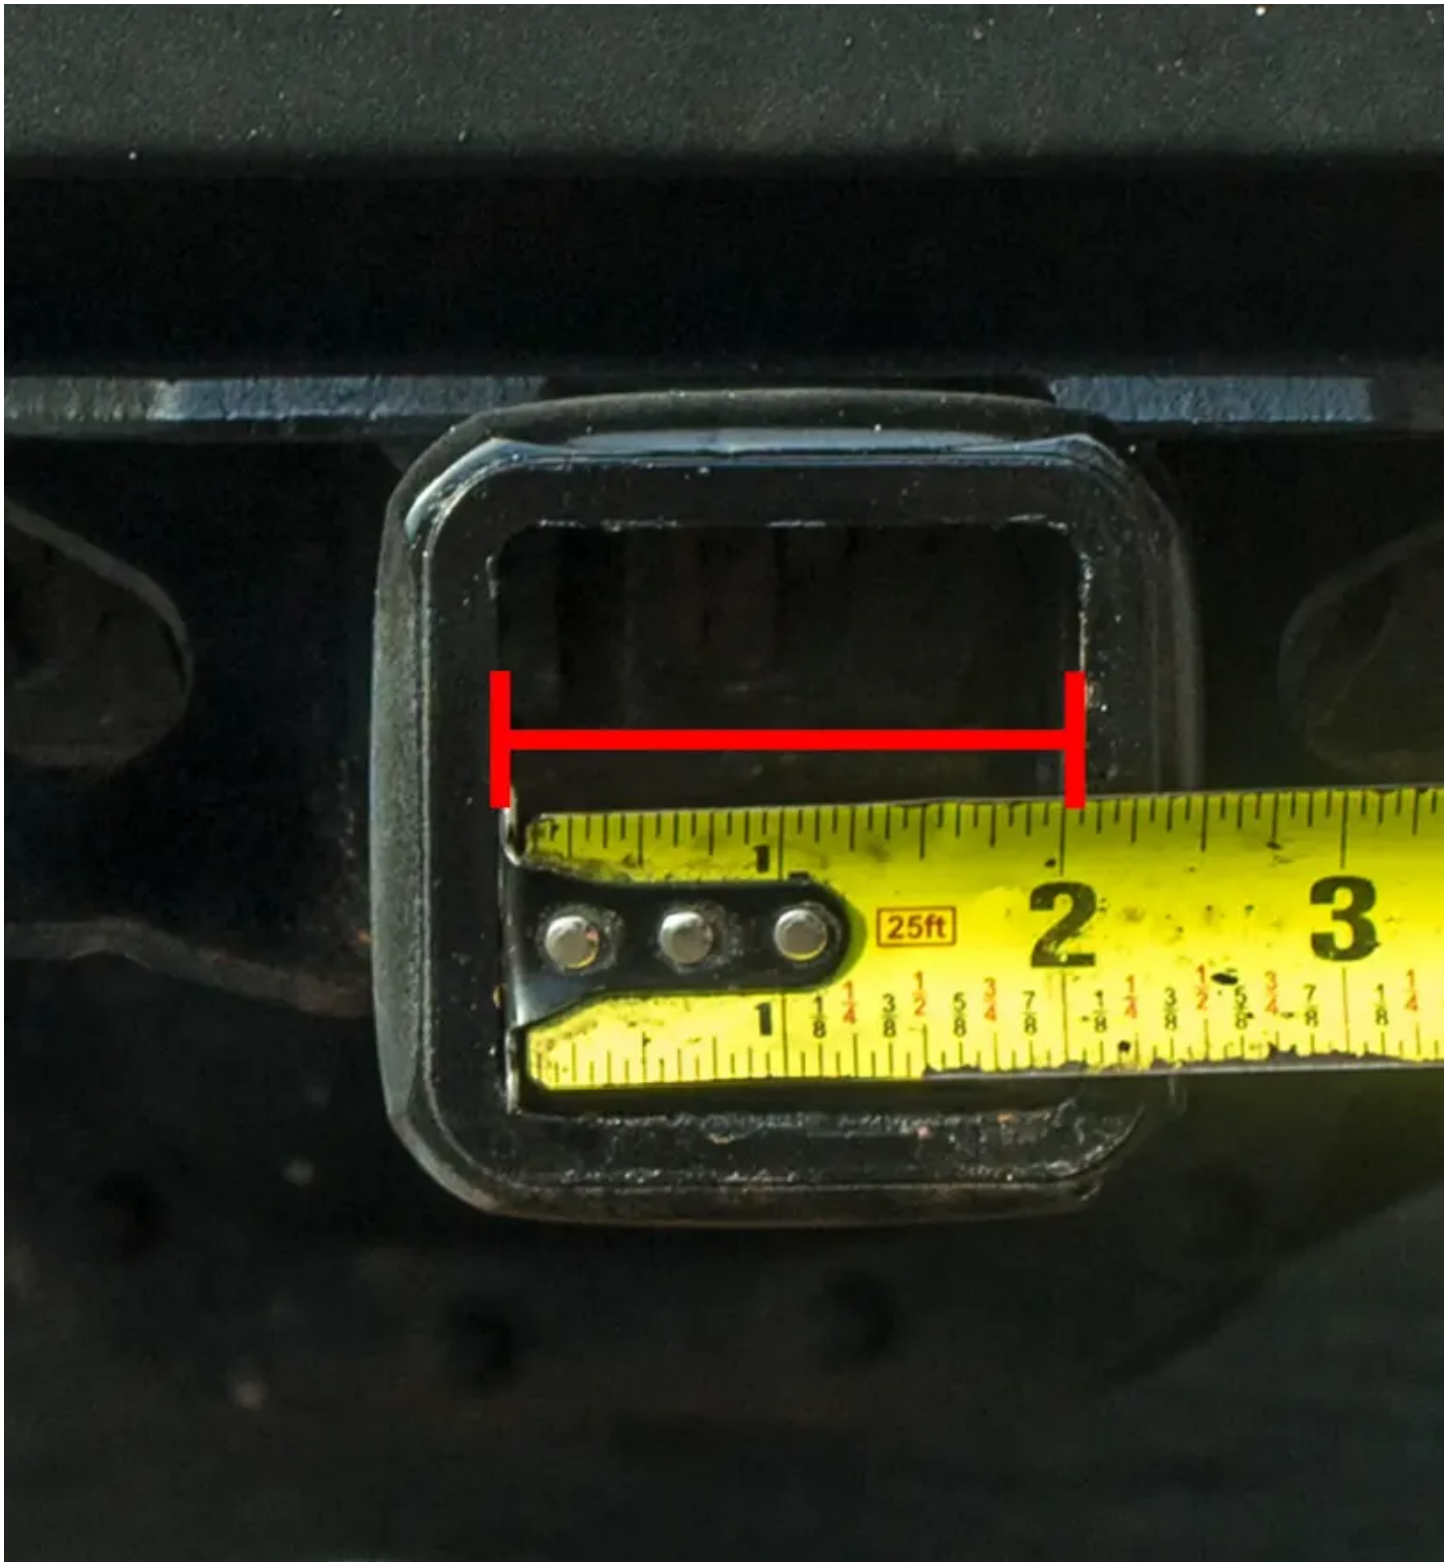


Figure B



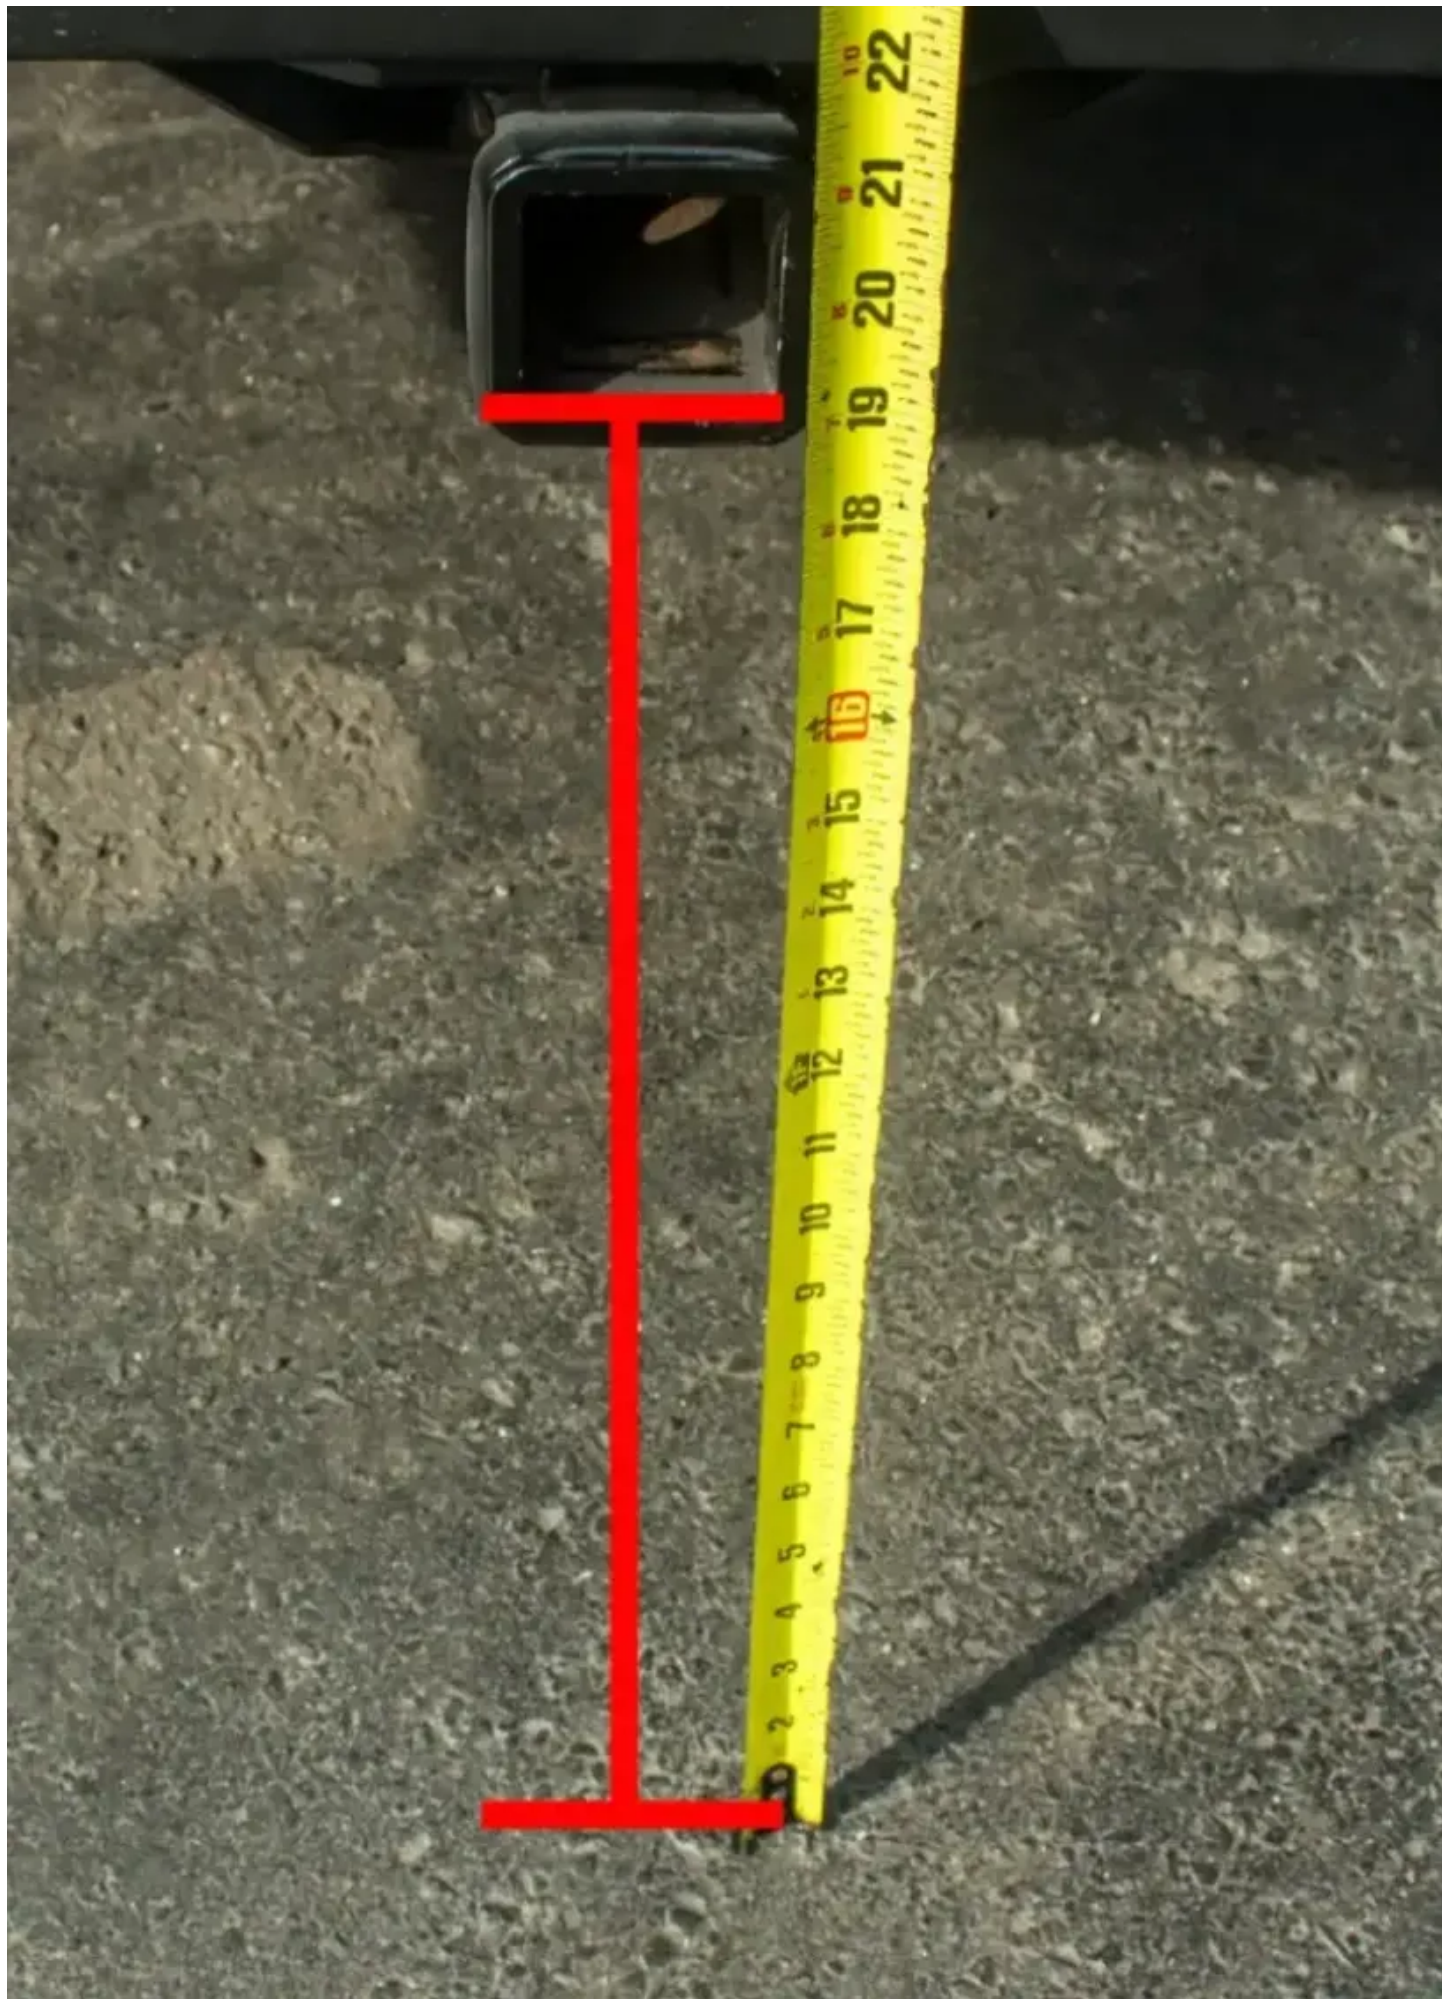

FAQs:

I fall between two measurements, what should I order?

Call us for help!

I tow heavy trailers (in excess of 8,000 pounds), does this impact what hitch I should order?

Please call us to discuss your exact measurements due to the possible squatting that may occur when your trailer is loaded.

My truck has helper air bags/air suspension, does this impact what hitch I need?

Please call us to discuss your measurements and what you are towing.

If you are unsure or have any questions, please contact us at 941-300-7220 and we will be happy to help you select the correct hitch for your vehicle and towing needs!