



DOOR PANELS FOR REFRIGERATOR MODELS RM1350 RME1350



USA
SERVICE OFFICE
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

**For Service Center
Assistance Call:**
800-544-4881

INSTALLATION INSTRUCTIONS

**DOOR PANELS
3106863.180(X)**

REVISION A
Form No. 3312203.163 07/18
©2018 Dometic, LLC
LaGrange, IN 46761

INSTALLATION INSTRUCTIONS


MOUNTING THE DOOR PANELS

Read the instructions thoroughly and check that the panel dimensions are in compliance with those given in the table below.


PANEL DIMENSIONS					
max. thickness 5/32" (4 mm)					
		Height		Width	
		max	min	max	min
UPPER					
RM1350	inches [mm]	19-7/32 [488]	19-9/64 [486]	15-43/64 [398]	15-19/32 [396]
LOWER					
RM1350	inches [mm]	40-1/32 [1017]	39-31/32 [1015]	15-43/64 [398]	15-19/32 [396]

TO MOUNT THE DOOR PANEL, FOLLOW THESE STEPS:


1. Open the door 90 degrees.
2. Remove the decoration strip.

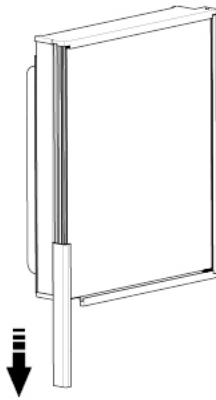


3. Insert the door panel's edges into the grooves of the door frame. Push the panel sideways until the edge of the panel is fitted into the opposite side groove.

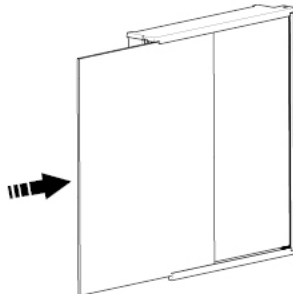

4. Put back the decoration strip. Slide or snap into place.

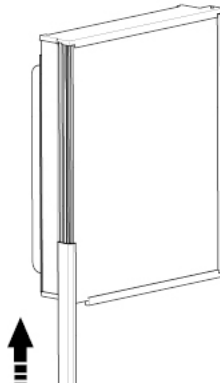

5. Slide the handle into place. Make sure to fit the parts together, slot into the slot, as shown in the illustration below.

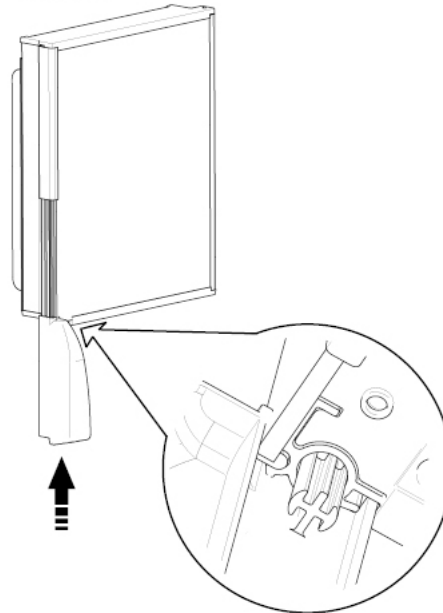

6. Attach the handle with a screw.

