


IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS

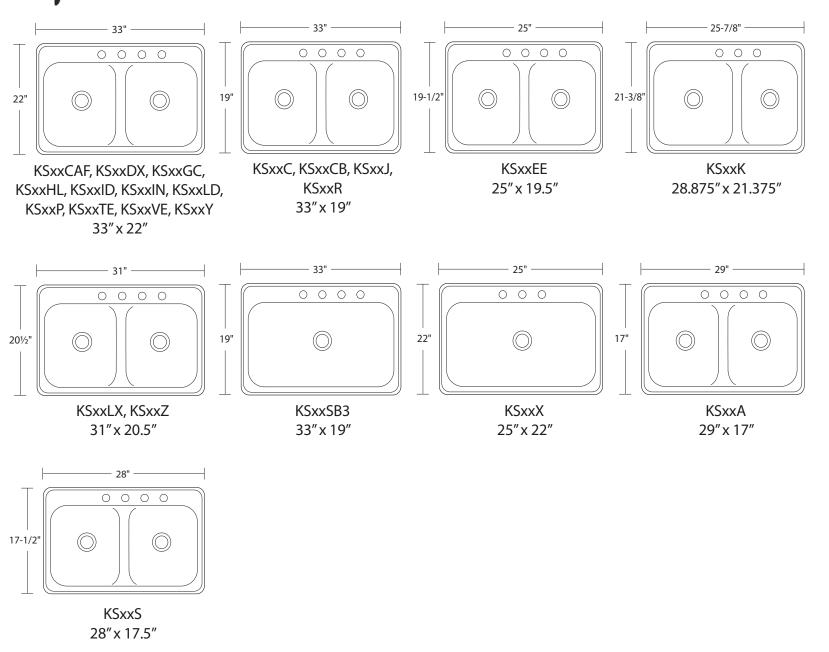

DO YOU HAVE?

Tape measure	Caulk gun
Pencil	Caulk (color matched and high grade silicone for drains)
Safety glasses	Saber saw

IMPORTANT

- Read installation instructions carefully before starting project.
- Keep instructions for warranty information.
- Peel back protective film to verify color before installation.
- Do not use plumber's putty. It will cause product failure and void warranty. Use a high grade silicone caulk for all necessary locations.

INSTALLATION INSTRUCTIONS

REPLACING YOUR OLD SINK:

Cutting of your existing countertop may not be necessary. Refer to cutout dimensions on next page. Place the sink in the hole and make sure the rim of your new sink rests on your counter top. If you need to adjust the hole size, use a saber saw or keyhole saw then continue with the instructions below.

IMPORTANT - Refer to the counter top manufacturer to determine the appropriate cutting method for your counter top.

IMPORTANT - The clip system on this sink is designed to hold it in place while the silicone dries. If the sink opening is too large the sink can be weighed down to hold it in place while the silicone dries. Take care not to scratch the sink if using a weight.

IMPORTANT - Leave protective film on during installation.

MOUNTING SINK IN A NEW COUNTER TOP:

- + Place the sink upside down on the counter top in the desired location. Please allow adequate room from the back of the counter top for manufacturing tolerances +/- 1/8".
- + With a pencil, trace a line around the outside edge of the sink onto the counter top.
- + Remove sink from the counter top.
- + Refer to cutout dimensions on next page, locate your sink style and then center the cutout dimension within the traced outline of the sink on the counter top.
- + Cut the counter top on this new line.
- + Install faucet and drains to sink per manufacturers instructions.
- + Peel back protective film around drain hole before installing drains.
- + When installing drain to sink make sure to use a high grade silicone caulk.

Warning: Do not use plumber's putty. It will cause product failure and void warranty. Use a high grade silicone caulk for all necessary locations.

- + Place the sink in the hole at an angle. (Fig 1)
- + Push down on the front and sides of the sink while holding the faucet side against the counter top. Push down firmly to make sure the sink sits flush on the countertop. (Fig 2)
- + Shift sink side to side and front to back to make sure the clips "seat properly".
- + If sink needs removed for any reason push in on clips from underneath and then push up gently on sink until free.
- + Peel back protective film around edge of sink before applying silicone. Apply a high grade of color-matched silicone caulk. (Fig 3)
- + Connect all plumbing.

Warning: Do not use plumber's putty. It will cause product failure and void warranty. Use a high grade silicone caulk for all necessary locations.

CARE AND CLEANING INSTRUCTIONS

- + Clean surface with nonabrasive liquid detergent and warm water. Use cleaning products such as Soft Scrub Gel[®], Comet Gel[®], Gel Gloss[®] or other similar products.
- + DO NOT USE ABRASIVE CLEANERS, "steel wool" or wire brushes on surface. Caustic drain cleaners may cause surface damage. Open flames (cigarettes, candles, etc.) may damage surface.
- + Surface damage-light scratches, dulled areas, and small cuts and are restored by first scrubbing with automotive-type white body cleaning compound, such as Meguire's #9 Swirl®Remover, followed by an application of Gel Gloss®. See next page for detailed Scratch Repair Instructions.
- + Remember to always use a cutting board or sink protector when using knives or sharp objects in your sink.
- + Recommendation: When pouring boiling water or placing hot pots or pans into the sink, run some cold water simultaneously.

WARNING: Some cleaning products are not suitable for use. Read all labels carefully. DO NOT USE if they say "not suitable for use with ABS, acrylic or polystyrene".

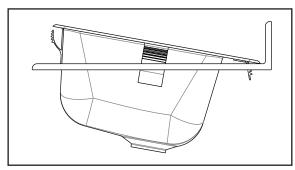


FIGURE 1. Place the sink in the hole at an angle.

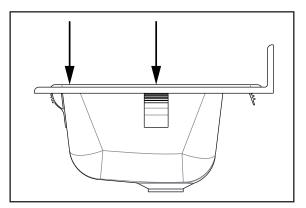


FIGURE 2. Push down on the front of the sink.


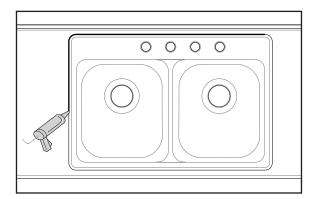


FIGURE 3. Apply Silicone.



LYONS INDUSTRIES, INC. 30000 M-62 West, Dowagiac, MI 49047 phone (800) 458-9036 fax (269) 782-5159 lyonsindustries.com e-mail lyonsind@lyonsindustries.com 08/06/13

COUNTER TOP CUTOUT DIMENSIONS

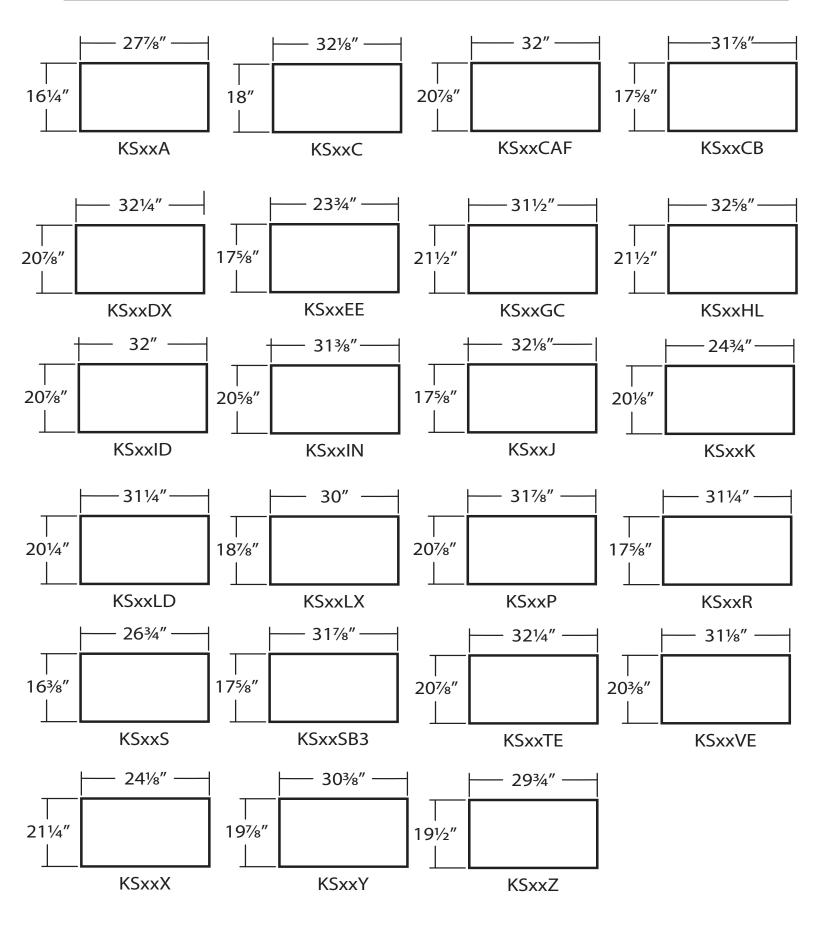

SCRATCH REMOVAL INSTRUCTIONS

1. For effective scratch removal and polishing, you will need to purchase these items.

1 sheet 1000 grit 3M® wet-dry sandpaper

1 sheet 1500 grit 3M® wet-dry sandpaper

- 1 sheet 2000 grit 3M[®] wet-dry sandpaper
- 1 small container of 3M[®] rubbing compound #05933
- These items can be purchased at most auto supply stores that provide supplies to professional paint and body shops. Call before you go. Not all auto supply stores will have these items.
- 2. Start sanding with 2000 grit paper. Use small squares of paper about 2" x 2" for all sanding and use lots of water. The water serves as both a lubricant and to prevent residue buildup on the paper. Residue buildup shortens the effective life of the paper and may scratch the surface you're trying to polish.
- **3.** 2000 grit paper is the finest grit available (the higher the number, the finer the grit). If you can't remove all of the scratches with 2000 grit, switch to 1500 grit. Remember to wash the paper frequently with water as you sand.
- 4. If all of the scratches can't be removed with 1500 grit, switch to 1000 grit. This should remove most fine scratches. If you have deep scratches or a gouge, coarser paper may have to be used (see chart to right). Be careful! Using grit that is too coarse may actually put in more scratches than it removes.
- 5. Once you have removed all of the scratches, by sanding with the finest paper possible, repeat the sanding process using successively finer grits of paper until you've once again sanded with 2000 grit.
- 6. Now use 3M® rubbing compound #05933 on a soft, damp cloth. Polish using considerable pressure to produce a smooth, shinny finish.

DEEP GOUGE

600 - 2000 arit

MEDIUM SCRATCH

1000 – 2000 grit

SUPERFICIAL SCRATCH 2000 grit

LIGHT SCRATCH

1500 – 2000 grit

SCRATCH / SANDPAPER GUIDE

LYONS PREMIUM CAST ACRYLIC KITCHEN SINK — LIFETIME LIMITED WARRANTY

Lyons Industries, Inc warrants to the original purchaser that this Kitchen Sink will be free of manufacturing defects, which affect the performance of this product for the use it was intended. The warranty period begins when the consumer/user purchases the unit. FROM DATE OF PURCHASE

1st Year - Should the unit be otherwise than warranted, Lyons Industries, Inc will repair or exchange a defective unit. The exchange of a unit will be limited to supplying a replacement unit or component part of comparable size and style, and does not include any cost of removal, installation or transportation.

2nd Year - Should the unit be otherwise than warranted, Lyons Industries, Inc will pay 50% of the sink value toward repair or exchange of a defective unit. The exchange of a unit will be limited to supplying a replacement unit or component part of comparable size and style, and does not include any cost of removal, installation or transportation.

3rd **Year** - Should the unit be otherwise than warranted, Lyons Industries, Inc will pay 25% of the sink value toward repair or exchange of a defective unit. The exchange of a unit will be limited to supplying a replacement unit or component part of comparable size and style, and does not include any cost of removal, installation or transportation.

4 or More Years - Should the unit be otherwise than warranted, Lyons Industries, Inc will pay 10% of the sink value toward repair or exchange of a defective unit. The exchange of a unit will be limited to supplying a replacement unit or component part of comparable size and style, and does not include any cost of removal, installation or transportation. Lyons Industries, Inc reserves the right to require the return, at the purchaser's expense, of the damaged product for repair or exchange before providing the services under this warranty. Warranty does not cover damage that can be repaired by following the Scratch Removal Instructions or the Care and Cleaning Instructions. This warranty excludes normal wear and tear. This warranty shall be voided by improper maintenance contrary to use and care Instructions. This warranty does not apply to units installed in commercial or business establishments, hotels, or apartments. Nor does the warranty apply if the unit is moved from its place of initial installation, subject to accident, abuse or misuse. No warranty will apply if the unit is not installed in accordance with the instructions supplied by Lyons Industries, Inc, local building codes and ordinances or if the care and cleaning instructions have not been followed. Any implied warranty of fitness for a particular use or purpose, or warranty of merchantability is limited in duration to the express warranty provided herein unless a shorter period is allowed by law. Lyons Industries, Inc shall not be liable for incidental or consequential damages for any damage to building, its contents or occupants. Some states do not allow limitations of incidental or consequential damages so the above limitations and exclusions may not apply to you. In such a state, liability shall be limited to the extent permitted by state law. Any claim under this warranty must be made in writing, with your original proof of purchase enclosed to Lyons Industries, Inc, 30000 M-62 West, Dowagiac, Michigan 49047 to request performance by Lyons Industries, Inc under the terms of this warranty. After such notice, a prompt investigation of the claim shall be made by Lyons Industries, Inc who will promptly perform its obligation under the terms of this warranty.