www.dyersonline.com

Dometic

GASKET KIT INSTALLATION INSTRUCTIONS

This Kit is designed to allow field replacement of door gaskets that are formed into the door during the assembly process. If the installer of this Kit is unfamiliar with this product, Dometic recommends that this Kit is installed by a Qualified Service Center or a refrigeration technician.

Important: If installing this Gasket Kit on a door that contains a Hinge Repair Kit, the Hinge Plate on door must be removed to remove existing Gasket and when installing new Gasket. If installing this Gasket Kit in conjunction with a new Hinge Kit, install Gasket Kit prior to installing Hinge Kit.

SINGLE DOOR MODELS		DOUBLE DOOR MODELS	
Kit #	Model #	Kit #	Model #
3103689.000	RM360, RM361, RM2300, RM2301	3103688.002	RM760, RM761, RM763, RM2600, RM2601,
2402004 000	DMACO DMACA DMOAOO DMOAOA DDOAOC		RM2602, RM2603, RM3600, RM3601
3103691.006	R <mark>M460, RM</mark> 461, RM2 <mark>4</mark> 00, RM2401, RB2405	2402600 000	DM4200 DM4204 DA4202 DM4202 DM2000
3103692.004	RM660, RM661, RM2500, RM2501, RM3500,	3103690.008	RM1300, RM1301, RA1302, RM1303, RM2800, RM2801, RM2802, RM2803, RM3800, RM3801,
3103092.004	RM3501		RM4801
	KIVISSOT		KIVI400 I
3108708.367	RM2310	3108700.000	RM2604, RM2610, RM2607, RM3604, RM3607
0100700.007	Trivizoro	0100700.000	11W2004, 11W2010, 11W2007, 11W0007
3108708.375	RM2410	3108700.018	RM2804, RM2810, RM2807, RM3804, RM3807,
			RM4804
3108708.383	RM2510		
		3108704.250	RM2611, RM2612
3108708.391	RM2452, RM2453		
		3108710.900	RM2620
3108708.409	RM2551, RM2552, RM2553, RM2554	A (
	72.	3108704.268	RM2811, RM2812
3108708.417	S520, S530		
	All Life Southed	3108710.918	RM2820
	All kits include:	0400704040	DM7020 DM7420
	1 roll double stick tape 1 tube silicone sealer	3108704.242	RM7030, RM7130
	1 instruction sheet	3108704.374	RM2652, RM3662, RM3663
	i ilistruction sneet	3100704.374	1111/2002,111110002,111110000
	Single door kits include:	3108704.382	RM2852, RM3862, RM3863, RM4872, RM4873
	1 door gasket	27070	
	3	3108704.390	RM7732, RM7832
	Double door kits include:	J. 10	
	1 freezer door gasket	3108708.441	NDR1062
	1 refrigerator door gasket	4/	
	*Note: RGE400 individual gaskets.	3108708.458	RM1272, NDR1272, RM1282, NDR1282
		3108708.466	NDR1292
	Tools required:	0400700 474	NPP4400
	phillips screwdriver	3108708.474	NDR1492
	small adjustable wrench razor knife	2400700 425	S1621, S1 631
	scissors	3108708.425	31021, 31031
	30133013	3108708.433	S1821, S1831
		0100700.700	31021, 31001
		*3108708.201	RGE400 Upper Door Gasket
		*3108708.219	RGE400 Lower Door Gasket
			~//

REVISION

Form No. 3103718.098 6/03 (Replaces 3103718.080) ©2003 Dometic Corporation LaGrange, IN 46761



Dometic


REMOVAL OF OLD GASKET

- 1. Remove door completely from refrigerator.
- Lay door on a flat surface with gasket up. Use the razor knife and cut the old gasket at a 45 degree angle in one corner.
- GENTLY lift gasket and cut from outside edge of the door.
 Cut as closely as possible to the edge of the plastic liner on all four sides.



NOTE: DO NOT pull gasket from door as damage to plastic liner can occur.

- 4. To cut the remaining strip of gasket from the door, use the razor knife and follow the edge of the plastic liner.
- Check to make sure all the gasket is out of the liner; then clean new gasket and door with a mild glass cleaner. It is <u>extremely important</u> to <u>clean</u> the door so the new gasket will adhere properly.

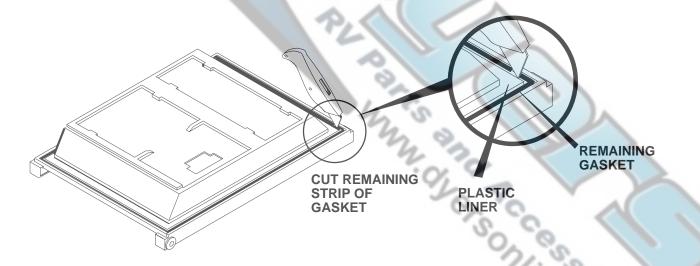

Dometic

INSTALLATION OF THE NEW DOOR GASKET

- 1. Lay the new gasket on a clean, flat surface with the magnetic side down.
- 2. Use scissors to cut a 45° angle on the end of the doublestick tape. Affix tape to inner edge of gasket. Place tape all the way around the gasket – leaving approximately 1/ 4 inch gap at corners. (See Figure below).
- Double-check to be sure the old gasket is completely removed from the door.
 - **NOTE**: If refrigerator has been in operation, it will be necessary to allow door to warm-up to room temperature (70° or above) before tape is applied to the door and gasket.
- 4. Apply 1/4 inch bead of sealer to the gaps on the four

- corners of the new gasket. (See Figure below).
- 5. Remove paper from tape and install the new gasket carefully on the door.
- Press the new gasket firmly in place to insure proper adhesion. <u>DO NOT</u> disturb or reinstall door for 48 hours.
- 7. Reinstall door on the refrigerator to complete the installation.

NOTE: If you do not get a proper seal or the door opens on its own, it may be necessary to lock the door shut for a few days. This will allow the door gasket time to shape itself to the sealing frame of the refrigerator.

